

## Audi V25.71 Diagnostics List(Note:For reference only)

MODEL	SYSTEM	TYPE	Functions					
			System Info	Read Dtc	Clear Dtc	Data stream	Actuatio	Specail
100	03 Brake Electronics	(..-6/98)	√	√	√	√	√	√
	15 Airbags	(..-6/98)	√	√	√	√	√	√
	02 Transmission Electronicsl	(..-6/98)	√	√	√	√	√	√
	35 Central Locking	(..-6/98)	√	√	√	√	√	√
	08 AC/Heating electronics	(..-6/98)	√	√	√	√	√	√
	38 ROOF ELECTRONICS	(..-6/98)	√	√	√	√	√	√
	01 Engine electronics	(..-6/98)	√	√	√	√	√	√
	25 Immobilizer	(..-6/98)	√	√	√	√	√	√
200	03 Brake Electronics	(..-6/98)	√	√	√	√	√	√
	15 Airbags	(..-6/98)	√	√	√	√	√	√
	02 Transmission Electronicsl	(..-6/98)	√	√	√	√	√	√
	35 Central Locking	(..-6/98)	√	√	√	√	√	√
	08 AC/Heating electronics	(..-6/98)	√	√	√	√	√	√
	38 ROOF ELECTRONICS	(..-6/98)	√	√	√	√	√	√
	01 Engine electronics	(..-6/98)	√	√	√	√	√	√
	25 Immobilizer	(..-6/98)	√	√	√	√	√	√
80	03 Brake Electronics	(..-6/98)	√	√	√	√	√	√
	15 Airbags	(..-6/98)	√	√	√	√	√	√
	02 Transmission Electronicsl	(..-6/98)	√	√	√	√	√	√
	35 Central Locking	(..-6/98)	√	√	√	√	√	√
	08 AC/Heating electronics	(..-6/98)	√	√	√	√	√	√
	38 ROOF ELECTRONICS	(..-6/98)	√	√	√	√	√	√
	01 Engine electronics	(..-6/98)	√	√	√	√	√	√
	25 Immobilizer	(..-6/98)	√	√	√	√	√	√
90	03 Brake Electronics	(..-6/98)	√	√	√	√	√	√
	15 Airbags	(..-6/98)	√	√	√	√	√	√
	02 Transmission Electronicsl	(..-6/98)	√	√	√	√	√	√
	35 Central Locking	(..-6/98)	√	√	√	√	√	√
	08 AC/Heating electronics	(..-6/98)	√	√	√	√	√	√
	38 ROOF ELECTRONICS	(..-6/98)	√	√	√	√	√	√

## Audi V25.71 Diagnostics List(Note:For reference only)

MODEL	SYSTEM	TYPE	Functions					
			System Info	Read Dtc	Clear Dtc	Data stream	Actuatio	Specail
	01 Engine electronics	(..-6/98)	√	√	√	√	√	√
	25 Immobilizer	(..-6/98)	√	√	√	√	√	√
A2	03 Brake Electronics	(..-03)	√	√	√	√	√	√
	03 Brake Electronics	(01-..)	√	√	√	√	√	√
	15 Airbags	(..-03)	√	√	√	√	√	√
	49 Auto. Lighting switch	(..-00)	√	√	√	√	√	√
	02 Transmission ElectronicsI	(..-03)	√	√	√	√	√	√
	35 Central Locking	(..-03)	√	√	√	√	√	√
	19 Gateway data bus	(..-03)	√	√	√	√	√	√
	08 AC/Heating electronics	(..-03)	√	√	√	√	√	√
	46 Central Control Module	(..-03)	√	√	√	√	√	√
	38 ROOF ELECTRONICS	(..-00)	√	√	√	√	√	√
	17 Instrument Cluster	(..-00)	√	√	√	√	√	√
	16 16 Steering Wheel Electronics Electronic	(..-03)	√	√	√	√	√	√
	75 Emergency call module	(..-00)	√	√	√	√	√	√
	01 Engine electronics	(..-03)	√	√	√	√	√	√
	25 Immobilizer	(..-00)	√	√	√	√	√	√
	29 Left light control	(..-00)	√	√	√	√	√	√
	37 Navigation	(..-00)	√	√	√	√	√	√
	39 Right light control	(..-00)	√	√	√	√	√	√
	47 Soundsystem	(..-00)	√	√	√	√	√	√
	56 Radio	(..-00)	√	√	√	√	√	√
03 Brake Electronics	(..-03)	√	√	√	√	√	√	
03 Brake Electronics	(01-02)	√	√	√	√	√	√	
03 Brake Electronics	(03-..)	√	√	√	√	√	√	
15 Airbags	(..-01)	√	√	√	√	√	√	
15 Airbags	(03-..)	√	√	√	√	√	√	
25 Immobilizer	(..-00)	√	√	√	√	√	√	
49 Auto. Lighting switch	(..-00)	√	√	√	√	√	√	
7D Auxiliary Heater	(..-00)	√	√	√	√	√	√	

## Audi V25.71 Diagnostics List(Note:For reference only)

MODEL	SYSTEM	TYPE	Functions					
			System Info	Read Dtc	Clear Dtc	Data stream	Actuatio	Specail
A3	7D Auxiliary Heater	(03-..)	√	√	√	√	√	√
	71 Battery charger	(..-00)	√	√	√	√	√	√
	61 Battery control	(..-00)	√	√	√	√	√	√
	43 BRAKER BOOST.ASSI.	(..-00)	√	√	√	√	√	√
	09 Electronic Ctrl Electronics	(03-..)	√	√	√	√	√	√
	19 Gateway data bus	(..-03)	√	√	√	√	√	√
	08 AC/Heating electronics	(..-03)	√	√	√	√	√	√
	08 AC/Heating electronics	(03-..)	√	√	√	√	√	√
	12 Clutch electronics	(..-00)	√	√	√	√	√	√
	46 Central Control Module	(..-03)	√	√	√	√	√	√
	46 Central Control Module	(03-..)	√	√	√	√	√	√
	38 ROOF ELECTRONICS	(..-00)	√	√	√	√	√	√
	38 ROOF ELECTRONICS	(03-..)	√	√	√	√	√	√
	13 Distance control	(..-00)	√	√	√	√	√	√
	17 Instrument Cluster	(..-00)	√	√	√	√	√	√
	17 Instrument Cluster	(03-..)	√	√	√	√	√	√
	DRIVER FOOT BOAR	(..-00)	√	√	√	√	√	√
	DRIVER SEAT CONTR	(..-00)	√	√	√	√	√	√
	42 DRIVER-DOOR ELECT.	(..-00)	√	√	√	√	√	√
	42 DRIVER-DOOR ELECT.	(03-..)	√	√	√	√	√	√
	09 Electronic Ctrl Electronics	(..-00)	√	√	√	√	√	√
	16 16 Steering Wheel Electronics Electronic	(..-03)	√	√	√	√	√	√
	16 16 Steering Wheel Electronics Electronic	(03-..)	√	√	√	√	√	√
	75 Emergency call module	(..-00)	√	√	√	√	√	√
	01 Engine electronics	(..-03)	√	√	√	√	√	√
	01 Engine electronics 1.8T AQA	(99-..)	√	√	√	√	√	√
	01 Engine electronics 1.9 TDI BKC	(04-..)	√	√	√	√	√	√
	01 Engine electronics 2.0 TDI BKD	(04-..)	√	√	√	√	√	√
01 Engine electronics	(03-..)	√	√	√	√	√	√	
01 Engine electronics	(..-00)	√	√	√	√	√	√	

## Audi V25.71 Diagnostics List(Note:For reference only)

MODEL	SYSTEM	TYPE	Functions					
			System Info	Read Dtc	Clear Dtc	Data stream	Actuatio	Specail
	07 DISPLAY-/CNTL UNIT	(..-00)	√	√	√	√	√	√
	55 Headlight range control	(..-03)	√	√	√	√	√	√
	25 Immobilizer	(..-00)	√	√	√	√	√	√
	25 Immobilizer	(03-..)	√	√	√	√	√	√
	62 LR-DOOR ELECTRONI.	(..-00)	√	√	√	√	√	√
	62 LR-DOOR ELECTRONI.	(03-..)	√	√	√	√	√	√
	29 Left light control	(..-00)	√	√	√	√	√	√
	53 Parking Brake	(..-00)	√	√	√	√	√	√
	76 Parking aid	(..-00)	√	√	√	√	√	√
	52 PASSE.-DOOR ELECT.	(..-00)	√	√	√	√	√	√
	52 PASSE.-DOOR ELECT.	(03-..)	√	√	√	√	√	√
	PASS.FOOT BOARD	(..-00)	√	√	√	√	√	√
	PASSIVE ENTRY	(..-00)	√	√	√	√	√	√
	23 BRAKER BOOSTER	(..-00)	√	√	√	√	√	√
	56 Radio	(03-..)	√	√	√	√	√	√
	27 DIS./CTL UNIT REAR	(..-00)	√	√	√	√	√	√
	39 Right light control	(..-00)	√	√	√	√	√	√
	72 RR-DOOR ELECTRONI.	(..-00)	√	√	√	√	√	√
	72 RR-DOOR ELECTRONI.	(03-..)	√	√	√	√	√	√
	SEAT/MIRROR POS.	(..-00)	√	√	√	√	√	√
	16 Steering Wheel Electronics	(..-00)	√	√	√	√	√	√
	16 Steering Wheel Electronics	(03-..)	√	√	√	√	√	√
	14 Wheel damping electronics	(..-00)	√	√	√	√	√	√
	65 Tyre pressure monitoring	(..-00)	√	√	√	√	√	√
	24 Drive slip control	(..-00)	√	√	√	√	√	√
	TRANSPORT MODALI	(03-..)	√	√	√	√	√	√
	57 TV-TUNER	(..-00)	√	√	√	√	√	√
	67 VOICE CONTROL	(..-00)	√	√	√	√	√	√
	22 4WD Electronics	(..-03)	√	√	√	√	√	√
	03 Brake Electronics	(..-03)	√	√	√	√	√	√

## Audi V25.71 Diagnostics List(Note:For reference only)

MODEL	SYSTEM	TYPE	Functions					
			System Info	Read Dtc	Clear Dtc	Data stream	Actuatio	Specail
	03 Brake Electronics	(01-..)	√	√	√	√	√	√
	03 Brake Electronics	(04-..)	√	√	√	√	√	√
	15 Airbags	(..-01)	√	√	√	√	√	√
	15 Airbags	(01-04)	√	√	√	√	√	√
	15 Airbags	(04-..)	√	√	√	√	√	√
	25 Immobilizer	(..-00)	√	√	√	√	√	√
	25 Immobilizer	(04-..)	√	√	√	√	√	√
	49 Auto. Lighting switch	(..-00)	√	√	√	√	√	√
	02 Transmission ElectronicsI	(..-03)	√	√	√	√	√	√
	7D Auxiliary Heater	(..-00)	√	√	√	√	√	√
	7D Auxiliary Heater	(04-..)	√	√	√	√	√	√
	71 Battery charger	(..-00)	√	√	√	√	√	√
	61 Battery control	(..-00)	√	√	√	√	√	√
	43 BRAKER BOOST.ASSI.	(..-00)	√	√	√	√	√	√
	09 Electronic Ctrl Electronics	(04-..)	√	√	√	√	√	√
	35 Central Locking	(..-03)	√	√	√	√	√	√
	19 Gateway data bus	(..-03)	√	√	√	√	√	√
	08 AC/Heating electronics	(..-03)	√	√	√	√	√	√
	08 AC/Heating electronics	(04-..)	√	√	√	√	√	√
	08 AC/Heating electronics	(04-..)	√	√	√	√	√	√
	12 Clutch electronics	(..-00)	√	√	√	√	√	√
	COLUMN/SEAT REG.	(04-..)	√	√	√	√	√	√
	46 Central Control Module	(..-03)	√	√	√	√	√	√
	46 Central Control Module	(04-..)	√	√	√	√	√	√
	38 ROOF ELECTRONICS	(..-00)	√	√	√	√	√	√
	38 ROOF ELECTRONICS	(04-..)	√	√	√	√	√	√
	13 Distance control	(..-00)	√	√	√	√	√	√
	17 Instrument Cluster	(..-00)	√	√	√	√	√	√
	17 Instrument Cluster	(01-04)	√	√	√	√	√	√
	17 Instrument Cluster	(04-..)	√	√	√	√	√	√

## Audi V25.71 Diagnostics List(Note:For reference only)

MODEL	SYSTEM	TYPE	Functions					
			System Info	Read Dtc	Clear Dtc	Data stream	Actuatio	Specail
A4	DIGITAL RADIO TUNE	(04-..)	√	√	√	√	√	√
	DRIVER FOOT BOAR	(..-00)	√	√	√	√	√	√
	DRIVER SEAT CONTR	(..-00)	√	√	√	√	√	√
	42 DRIVER-DOOR ELECT.	(..-00)	√	√	√	√	√	√
	42 DRIVER-DOOR ELECT.	(04-..)	√	√	√	√	√	√
	09 Electronic Ctrl Electronics	(..-00)	√	√	√	√	√	√
	16 16 Steering Wheel Electronics Electronic	(..-03)	√	√	√	√	√	√
	16 16 Steering Wheel Electronics Electronic	(04-..)	√	√	√	√	√	√
	75 Emergency call module	(..-00)	√	√	√	√	√	√
	EMERGENCY MODUL	(04-..)	√	√	√	√	√	√
	01 Engine electronics	(..-03)	√	√	√	√	√	√
	01 Engine electronics 1.9 TDI AWX	(01-..)	√	√	√	√	√	√
	01 Engine electronics	(04-..)	√	√	√	√	√	√
	01 Engine electronics	(..-00)	√	√	√	√	√	√
	07 DISPLAY-/CNTL UNIT	(..-00)	√	√	√	√	√	√
	55 Headlight range control	(..-03)	√	√	√	√	√	√
	55 Headlight range control	(04-..)	√	√	√	√	√	√
	25 Immobilizer	(..-00)	√	√	√	√	√	√
	25 Immobilizer	(04-..)	√	√	√	√	√	√
	62 LR-DOOR ELECTRONI.	(..-00)	√	√	√	√	√	√
	62 LR-DOOR ELECTRONI.	(04-..)	√	√	√	√	√	√
	29 Left light control	(..-00)	√	√	√	√	√	√
	53 Parking Brake	(..-00)	√	√	√	√	√	√
	76 Parking aid	(..-00)	√	√	√	√	√	√
	52 PASSE.-DOOR ELECT.	(..-00)	√	√	√	√	√	√
	52 PASSE.-DOOR ELECT.	(04-..)	√	√	√	√	√	√
	PASS.FOOT BOARD	(..-00)	√	√	√	√	√	√
PASSIVE ENTRY	(..-00)	√	√	√	√	√	√	
PHONE	(04-..)	√	√	√	√	√	√	
23 BRAKER BOOSTER	(..-00)	√	√	√	√	√	√	

## Audi V25.71 Diagnostics List(Note:For reference only)

MODEL	SYSTEM	TYPE	Functions					
			System Info	Read Dtc	Clear Dtc	Data stream	Actuatio	Specail
	56 Radio	(..-03)	√	√	√	√	√	√
	56 Radio	(04-..)	√	√	√	√	√	√
	27 DIS./CTL UNIT REAR	(..-00)	√	√	√	√	√	√
	39 Right light control	(..-00)	√	√	√	√	√	√
	72 RR-DOOR ELECTRONI.	(..-00)	√	√	√	√	√	√
	72 RR-DOOR ELECTRONI.	(04-..)	√	√	√	√	√	√
	SEAT/MIRROR POS.	(..-00)	√	√	√	√	√	√
	16 Steering Wheel Electronics	(..-00)	√	√	√	√	√	√
	16 Steering Wheel Electronics	(04-..)	√	√	√	√	√	√
	14 Wheel damping electronics	(..-00)	√	√	√	√	√	√
	56 Radio	(..-00)	√	√	√	√	√	√
	65 Tyre pressure monitoring	(..-00)	√	√	√	√	√	√
	24 Drive slip control	(..-00)	√	√	√	√	√	√
	57 TV-TUNER	(..-00)	√	√	√	√	√	√
	57 TV-TUNER	(04-..)	√	√	√	√	√	√
	67 VOICE CONTROL	(..-00)	√	√	√	√	√	√
	25 Immobilizer	(..-00)	√	√	√	√	√	√
	49 Auto. Lighting switch	(..-00)	√	√	√	√	√	√
	7D Auxiliary Heater	(..-00)	√	√	√	√	√	√
	71 Battery charger	(..-00)	√	√	√	√	√	√
	61 Battery control	(..-00)	√	√	√	√	√	√
	43 BRAKER BOOST.ASSI.	(..-00)	√	√	√	√	√	√
	12 Clutch electronics	(..-00)	√	√	√	√	√	√
	38 ROOF ELECTRONICS	(..-00)	√	√	√	√	√	√
	13 Distance control	(..-00)	√	√	√	√	√	√
	17 Instrument Cluster	(..-00)	√	√	√	√	√	√
	DRIVER FOOT BOAR	(..-00)	√	√	√	√	√	√
	DRIVER SEAT CONTR	(..-00)	√	√	√	√	√	√
	42 DRIVER-DOOR ELECT.	(..-00)	√	√	√	√	√	√

## Audi V25.71 Diagnostics List(Note:For reference only)

MODEL	SYSTEM	TYPE	Functions					
			System Info	Read Dtc	Clear Dtc	Data stream	Actuatio	Specail
A6(..-00)	09 Electronic Ctrl Electronics	(..-00)	√	√	√	√	√	√
	75 Emergency call module	(..-00)	√	√	√	√	√	√
	01 Engine electronics 2.8 V6 5v AQD	(00-..)	√	√	√	√	√	√
	01 Engine electronics	(..-00)	√	√	√	√	√	√
	07 DISPLAY-/CNTL UNIT	(..-00)	√	√	√	√	√	√
	25 Immobilizer	(..-00)	√	√	√	√	√	√
	62 LR-DOOR ELECTRONI.	(..-00)	√	√	√	√	√	√
	29 Left light control	(..-00)	√	√	√	√	√	√
	53 Parking Brake	(..-00)	√	√	√	√	√	√
	76 Parking aid	(..-00)	√	√	√	√	√	√
	52 PASSE.-DOOR ELECT.	(..-00)	√	√	√	√	√	√
	PASS.FOOT BOARD	(..-00)	√	√	√	√	√	√
	PASSIVE ENTRY	(..-00)	√	√	√	√	√	√
	23 BRAKER BOOSTER	(..-00)	√	√	√	√	√	√
	27 DIS./CTL UNIT REAR	(..-00)	√	√	√	√	√	√
	39 Right light control	(..-00)	√	√	√	√	√	√
	72 RR-DOOR ELECTRONI.	(..-00)	√	√	√	√	√	√
	SEAT/MIRROR POS.	(..-00)	√	√	√	√	√	√
	47 Soundsystem	(..-00)	√	√	√	√	√	√
	16 Steering Wheel Electronics	(..-00)	√	√	√	√	√	√
	14 Wheel damping electronics	(..-00)	√	√	√	√	√	√
	56 Radio	(..-00)	√	√	√	√	√	√
	65 Tyre pressure monitoring	(..-00)	√	√	√	√	√	√
24 Drive slip control	(..-00)	√	√	√	√	√	√	
57 TV-TUNER	(..-00)	√	√	√	√	√	√	
67 VOICE CONTROL	(..-00)	√	√	√	√	√	√	
	22 4WD Electronics	(..-03)	√	√	√	√	√	√
	03 Brake Electronics	(..-03)	√	√	√	√	√	√

## Audi V25.71 Diagnostics List(Note:For reference only)

MODEL	SYSTEM	TYPE	Functions					
			System Info	Read Dtc	Clear Dtc	Data stream	Actuatio	Specail
A6(..-03)	15 Airbags	(..-03)	√	√	√	√	√	√
	02 Transmission ElectronicsI	(..-03)	√	√	√	√	√	√
	35 Central Locking	(..-03)	√	√	√	√	√	√
	19 Gateway data bus	(..-03)	√	√	√	√	√	√
	08 AC/Heating electronics	(..-03)	√	√	√	√	√	√
	46 Central Control Module	(..-03)	√	√	√	√	√	√
	16 16 Steering Wheel Electronics Electronic	(..-03)	√	√	√	√	√	√
	01 Engine electronics	(..-03)	√	√	√	√	√	√
	55 Headlight range control	(..-03)	√	√	√	√	√	√
	56 Radio	(..-03)	√	√	√	√	√	√
A6(04-..)	02 Transmission ElectronicsI	(04-..)	√	√	√	√	√	√
	61 Battery control	(04-..)	√	√	√	√	√	√
	CHANGE BRAKE PAD	(04-..)	√	√	√	√	√	√
	CHASSIS MANAGEME	(04-..)	√	√	√	√	√	√
	COLUMN/SEAT REG.	(04-..)	√	√	√	√	√	√
	13 Distance control	(04-..)	√	√	√	√	√	√
	DIGITAL RADIO TUNE	(04-..)	√	√	√	√	√	√
	DIGITAL TV TUNER	(04-..)	√	√	√	√	√	√
	DISTANCE REGULATI	(04-..)	√	√	√	√	√	√
	EMERGENCY MODUL	(04-..)	√	√	√	√	√	√
	01 Engine electronics	(04-..)	√	√	√	√	√	√
	HATCHBACK DOOR E	(04-..)	√	√	√	√	√	√
	IDENT./COMMAND UN	(04-..)	√	√	√	√	√	√
	IND./COMMAND UNIT	(04-..)	√	√	√	√	√	√
	MEDIA PLAYER POSI	(04-..)	√	√	√	√	√	√
	37 Navigation	(04-..)	√	√	√	√	√	√
	53 Parking Brake	(04-..)	√	√	√	√	√	√
76 Parking aid	(04-..)	√	√	√	√	√	√	

## Audi V25.71 Diagnostics List(Note:For reference only)

MODEL	SYSTEM	TYPE	Functions					
			System Info	Read Dtc	Clear Dtc	Data stream	Actuatio	Specail
	PHONE	(04-..)	√	√	√	√	√	√
	REAR SEAT REG.	(04-..)	√	√	√	√	√	√
	ROOF MANAGEMENT	(04-..)	√	√	√	√	√	√
	SPECIAL FUNCTION	(04-..)	√	√	√	√	√	√
	14 Wheel damping electronics	(04-..)	√	√	√	√	√	√
	65 Tyre pressure monitoring	(04-..)	√	√	√	√	√	√
A6	ELECT. CENTRAL SY	(04-..)	√	√	√	√	√	√
	MEDIA PLAYER POSI	(04-..)	√	√	√	√	√	√
	PASSENGER SEAT R	(04-..)	√	√	√	√	√	√
	RELEV/SWITCON	(04-..)	√	√	√	√	√	√
	SAT. RADIO TUNER	(04-..)	√	√	√	√	√	√
	47 Soundsystem	(04-..)	√	√	√	√	√	√
	SUPP HEATER/AUTO	(04-..)	√	√	√	√	√	√
67 VOICE CONTROL	(04-..)	√	√	√	√	√	√	
A8(..-00)	49 Auto. Lighting switch	(..-00)	√	√	√	√	√	√
	71 Battery charger	(..-00)	√	√	√	√	√	√
	61 Battery control	(..-00)	√	√	√	√	√	√
	43 BRAKER BOOST.ASSI.	(..-00)	√	√	√	√	√	√
	DRIVER FOOT BOAR	(..-00)	√	√	√	√	√	√
	42 DRIVER-DOOR ELECT.	(..-00)	√	√	√	√	√	√
	09 Electronic Ctrl Electronics	(..-00)	√	√	√	√	√	√
	75 Emergency call module	(..-00)	√	√	√	√	√	√
	01 Engine electronics	(..-00)	√	√	√	√	√	√
	01 Engine electronics	(..-00)	√	√	√	√	√	√
	07 DISPLAY-/CNTL UNIT	(..-00)	√	√	√	√	√	√
	62 LR-DOOR ELECTRONI.	(..-00)	√	√	√	√	√	√
	29 Left light control	(..-00)	√	√	√	√	√	√
53 Parking Brake	(..-00)	√	√	√	√	√	√	

## Audi V25.71 Diagnostics List(Note:For reference only)

MODEL	SYSTEM	TYPE	Functions					
			System Info	Read Dtc	Clear Dtc	Data stream	Actuatio	Specail
	52 PASSE.-DOOR ELECT.	(..-00)	√	√	√	√	√	√
	PASS.FOOT BOARD	(..-00)	√	√	√	√	√	√
	PASSIVE ENTRY	(..-00)	√	√	√	√	√	√
	23 BRAKER BOOSTER	(..-00)	√	√	√	√	√	√
	27 DIS./CTL UNIT REAR	(..-00)	√	√	√	√	√	√
	39 Right light control	(..-00)	√	√	√	√	√	√
	72 RR-DOOR ELECTRONI.	(..-00)	√	√	√	√	√	√
	47 Soundsystem	(..-00)	√	√	√	√	√	√
	56 Radio	(..-00)	√	√	√	√	√	√
	65 Tyre pressure monitoring	(..-00)	√	√	√	√	√	√
	57 TV-TUNER	(..-00)	√	√	√	√	√	√
	67 VOICE CONTROL	(..-00)	√	√	√	√	√	√
A8(..-03)	22 4WD Electronics	(..-03)	√	√	√	√	√	√
	19 Gateway data bus	(..-03)	√	√	√	√	√	√
	16 16 Steering Wheel Electronics Electronic	(..-03)	√	√	√	√	√	√
A8(..-99)	03 Brake Electronics	(..-99)	√	√	√	√	√	√
	15 Airbags	(..-99)	√	√	√	√	√	√
	02 Transmission ElectronicsI	(..-99)	√	√	√	√	√	√
	35 Central Locking	(..-99)	√	√	√	√	√	√
	08 AC/Heating electronics	(..-99)	√	√	√	√	√	√
	38 ROOF ELECTRONICS	(..-99)	√	√	√	√	√	√
	17 Instrument Cluster	(..-99)	√	√	√	√	√	√
	01 Engine electronics	(..-99)	√	√	√	√	√	√
25 Immobilizer	(..-99)	√	√	√	√	√	√	
	22 4WD Electronics	(04-..)	√	√	√	√	√	√
	03 Brake Electronics	(04-..)	√	√	√	√	√	√
	15 Airbags	(04-..)	√	√	√	√	√	√
	02 Transmission ElectronicsI	(04-..)	√	√	√	√	√	√

## Audi V25.71 Diagnostics List(Note:For reference only)

MODEL	SYSTEM	TYPE	Functions					
			System Info	Read Dtc	Clear Dtc	Data stream	Actuatio	Specail
A8(04-..)	7D Auxiliary Heater	(04-..)	√	√	√	√	√	√
	61 Battery control	(04-..)	√	√	√	√	√	√
	09 Electronic Ctrl Electronics	(04-..)	√	√	√	√	√	√
	CHANGE BRAKE PAD	(04-..)	√	√	√	√	√	√
	CHASSIS MANAGEME	(04-..)	√	√	√	√	√	√
	08 AC/Heating electronics	(04-..)	√	√	√	√	√	√
	COLUMN/SEAT REG.	(04-..)	√	√	√	√	√	√
	46 Central Control Module	(04-..)	√	√	√	√	√	√
	38 ROOF ELECTRONICS	(04-..)	√	√	√	√	√	√
	13 Distance control	(04-..)	√	√	√	√	√	√
	17 Instrument Cluster	(04-..)	√	√	√	√	√	√
	DIGITAL RADIO TUNE	(04-..)	√	√	√	√	√	√
	DIGITAL TV TUNER	(04-..)	√	√	√	√	√	√
	DISTANCE REGULATI	(04-..)	√	√	√	√	√	√
	DRIVER IDENT.	(04-..)	√	√	√	√	√	√
	42 DRIVER-DOOR ELECT.	(04-..)	√	√	√	√	√	√
	16 16 Steering Wheel Electronics Electronic	(04-..)	√	√	√	√	√	√
	EMERGENCY MODUL	(04-..)	√	√	√	√	√	√
	01 Engine electronics	(04-..)	√	√	√	√	√	√
	HATCHBACK DOOR E	(04-..)	√	√	√	√	√	√
	55 Headlight range control	(04-..)	√	√	√	√	√	√
	IDENT./COMMAND UN	(04-..)	√	√	√	√	√	√
	25 Immobilizer	(04-..)	√	√	√	√	√	√
	IND./COMMAND UNIT	(04-..)	√	√	√	√	√	√
	LANE CHANGE ASSY	(04-..)	√	√	√	√	√	√
LANE MANT. ASSYST.	(04-..)	√	√	√	√	√	√	
62 LR-DOOR ELECTRONI.	(04-..)	√	√	√	√	√	√	
MEDIA PLAYER POSI	(04-..)	√	√	√	√	√	√	

## Audi V25.71 Diagnostics List(Note:For reference only)

MODEL	SYSTEM	TYPE	Functions					
			System Info	Read Dtc	Clear Dtc	Data stream	Actuatio	Specail
	37 Navigation	(04-..)	√	√	√	√	√	√
	53 Parking Brake	(04-..)	√	√	√	√	√	√
	76 Parking aid	(04-..)	√	√	√	√	√	√
	52 PASSE.-DOOR ELECT.	(04-..)	√	√	√	√	√	√
	PHONE	(04-..)	√	√	√	√	√	√
	56 Radio	(04-..)	√	√	√	√	√	√
	REAR 08 AC/Heating electronics	(04-..)	√	√	√	√	√	√
	REAR SEAT REG.	(04-..)	√	√	√	√	√	√
	72 RR-DOOR ELECTRONI.	(04-..)	√	√	√	√	√	√
	ROOF MANAGEMENT	(04-..)	√	√	√	√	√	√
	SPECIAL FUNCTION	(04-..)	√	√	√	√	√	√
	16 Steering Wheel Electronics	(04-..)	√	√	√	√	√	√
	14 Wheel damping electronics	(04-..)	√	√	√	√	√	√
	65 Tyre pressure monitoring	(04-..)	√	√	√	√	√	√
	57 TV-TUNER	(04-..)	√	√	√	√	√	√
VEICHL E POSITION R	(04-..)	√	√	√	√	√	√	
A8	ELECT. CENTRAL SY	(04-..)	√	√	√	√	√	√
	MEDIA PLAYER POSI	(04-..)	√	√	√	√	√	√
	PASSENGER SEAT R	(04-..)	√	√	√	√	√	√
	RELEV/SWITCON	(04-..)	√	√	√	√	√	√
	SAT. RADIO TUNER	(04-..)	√	√	√	√	√	√
	47 Soundsystem	(04-..)	√	√	√	√	√	√
	SUPP HEATER/AUTO	(04-..)	√	√	√	√	√	√
	67 VOICE CONTROL	(04-..)	√	√	√	√	√	√
	03 Brake Electronics	(..-99)	√	√	√	√	√	√
	15 Airbags	(..-99)	√	√	√	√	√	√
	02 Transmission Electronicsl	(..-99)	√	√	√	√	√	√
	71 Battery charger	(..-00)	√	√	√	√	√	√

## Audi V25.71 Diagnostics List(Note:For reference only)

MODEL	SYSTEM	TYPE	Functions					
			System Info	Read Dtc	Clear Dtc	Data stream	Actuatio	Specail
Cabrio	61 Battery control	(..-00)	√	√	√	√	√	√
	43 BRAKER BOOST.ASSI.	(..-00)	√	√	√	√	√	√
	35 Central Locking	(..-99)	√	√	√	√	√	√
	08 AC/Heating electronics	(..-99)	√	√	√	√	√	√
	38 ROOF ELECTRONICS	(..-99)	√	√	√	√	√	√
	17 Instrument Cluster	(..-99)	√	√	√	√	√	√
	DRIVER FOOT BOAR	(..-00)	√	√	√	√	√	√
	42 DRIVER-DOOR ELECT.	(..-00)	√	√	√	√	√	√
	09 Electronic Ctrl Electronics	(..-00)	√	√	√	√	√	√
	75 Emergency call module	(..-00)	√	√	√	√	√	√
	01 Engine electronics	(..-99)	√	√	√	√	√	√
	01 Engine electronics	(..-00)	√	√	√	√	√	√
	07 DISPLAY-/CNTL UNIT	(..-00)	√	√	√	√	√	√
	25 Immobilizer	(..-99)	√	√	√	√	√	√
	29 Left light control	(..-00)	√	√	√	√	√	√
	37 Navigation	(..-00)	√	√	√	√	√	√
	53 Parking Brake	(..-00)	√	√	√	√	√	√
	52 PASSE.-DOOR ELECT.	(..-00)	√	√	√	√	√	√
	PASS.FOOT BOARD	(..-00)	√	√	√	√	√	√
	PASSIVE ENTRY	(..-00)	√	√	√	√	√	√
	23 BRAKER BOOSTER	(..-00)	√	√	√	√	√	√
	27 DIS./CTL UNIT REAR	(..-00)	√	√	√	√	√	√
	39 Right light control	(..-00)	√	√	√	√	√	√
	47 Soundsystem	(..-00)	√	√	√	√	√	√
56 Radio	(..-00)	√	√	√	√	√	√	
57 TV-TUNER	(..-00)	√	√	√	√	√	√	
67 VOICE CONTROL	(..-00)	√	√	√	√	√	√	
03 Brake Electronics	(..-6/98)	√	√	√	√	√	√	

## Audi V25.71 Diagnostics List(Note:For reference only)

MODEL	SYSTEM	TYPE	Functions					
			System Info	Read Dtc	Clear Dtc	Data stream	Actuatio	Specail
Coupe'	15 Airbags	(..-6/98)	√	√	√	√	√	√
	02 Transmission ElectronicsI	(..-6/98)	√	√	√	√	√	√
	71 Battery charger	(..-00)	√	√	√	√	√	√
	61 Battery control	(..-00)	√	√	√	√	√	√
	43 BRAKER BOOST.ASSI.	(..-00)	√	√	√	√	√	√
	35 Central Locking	(..-6/98)	√	√	√	√	√	√
	08 AC/Heating electronics	(..-6/98)	√	√	√	√	√	√
	38 ROOF ELECTRONICS	(..-6/98)	√	√	√	√	√	√
	17 Instrument Cluster	(..-6/98)	√	√	√	√	√	√
	DRIVER FOOT BOAR	(..-00)	√	√	√	√	√	√
	42 DRIVER-DOOR ELECT.	(..-00)	√	√	√	√	√	√
	09 Electronic Ctrl Electronics	(..-00)	√	√	√	√	√	√
	75 Emergency call module	(..-00)	√	√	√	√	√	√
	01 Engine electronics	(..-6/98)	√	√	√	√	√	√
	01 Engine electronics	(..-00)	√	√	√	√	√	√
	07 DISPLAY-/CNTL UNIT	(..-00)	√	√	√	√	√	√
	25 Immobilizer	(..-6/98)	√	√	√	√	√	√
	29 Left light control	(..-00)	√	√	√	√	√	√
	37 Navigation	(..-00)	√	√	√	√	√	√
	53 Parking Brake	(..-00)	√	√	√	√	√	√
	52 PASSE.-DOOR ELECT.	(..-00)	√	√	√	√	√	√
	PASS.FOOT BOARD	(..-00)	√	√	√	√	√	√
	PASSIVE ENTRY	(..-00)	√	√	√	√	√	√
	23 BRAKER BOOSTER	(..-00)	√	√	√	√	√	√
	27 DIS./CTL UNIT REAR	(..-00)	√	√	√	√	√	√
	39 Right light control	(..-00)	√	√	√	√	√	√
47 Soundsystem	(..-00)	√	√	√	√	√	√	
56 Radio	(..-00)	√	√	√	√	√	√	

## Audi V25.71 Diagnostics List(Note:For reference only)

MODEL	SYSTEM	TYPE	Functions					
			System Info	Read Dtc	Clear Dtc	Data stream	Actuatio	Specail
	57 TV-TUNER	(..-00)	√	√	√	√	√	√
	67 VOICE CONTROL	(..-00)	√	√	√	√	√	√
S6	03 Brake Electronics	(..-6/98)	√	√	√	√	√	√
	15 Airbags	(..-6/98)	√	√	√	√	√	√
	02 Transmission Electronicsl	(..-6/98)	√	√	√	√	√	√
	71 Battery charger	(..-00)	√	√	√	√	√	√
	61 Battery control	(..-00)	√	√	√	√	√	√
	43 BRAKER BOOST.ASSI.	(..-00)	√	√	√	√	√	√
	35 Central Locking	(..-6/98)	√	√	√	√	√	√
	08 AC/Heating electronics	(..-6/98)	√	√	√	√	√	√
	38 ROOF ELECTRONICS	(..-6/98)	√	√	√	√	√	√
	17 Instrument Cluster	(..-6/98)	√	√	√	√	√	√
	DRIVER FOOT BOAR	(..-00)	√	√	√	√	√	√
	42 DRIVER-DOOR ELECT.	(..-00)	√	√	√	√	√	√
	09 Electronic Ctrl Electronics	(..-00)	√	√	√	√	√	√
	75 Emergency call module	(..-00)	√	√	√	√	√	√
	01 Engine electronics	(..-6/98)	√	√	√	√	√	√
	01 Engine electronics	(..-00)	√	√	√	√	√	√
	01 Engine electronics	(..-00)	√	√	√	√	√	√
	07 DISPLAY-/CNTL UNIT	(..-00)	√	√	√	√	√	√
	25 Immobilizer	(..-6/98)	√	√	√	√	√	√
	29 Left light control	(..-00)	√	√	√	√	√	√
	37 Navigation	(..-00)	√	√	√	√	√	√
	53 Parking Brake	(..-00)	√	√	√	√	√	√
	52 PASSE.-DOOR ELECT.	(..-00)	√	√	√	√	√	√
PASS.FOOT BOARD	(..-00)	√	√	√	√	√	√	
PASSIVE ENTRY	(..-00)	√	√	√	√	√	√	
23 BRAKER BOOSTER	(..-00)	√	√	√	√	√	√	

## Audi V25.71 Diagnostics List(Note:For reference only)

MODEL	SYSTEM	TYPE	Functions					
			System Info	Read Dtc	Clear Dtc	Data stream	Actuatio	Specail
	27 DIS./CTL UNIT REAR	(..-00)	√	√	√	√	√	√
	39 Right light control	(..-00)	√	√	√	√	√	√
	47 Soundsystem	(..-00)	√	√	√	√	√	√
	56 Radio	(..-00)	√	√	√	√	√	√
	57 TV-TUNER	(..-00)	√	√	√	√	√	√
	67 VOICE CONTROL	(..-00)	√	√	√	√	√	√
S8	03 Brake Electronics	(..-6/98)	√	√	√	√	√	√
	15 Airbags	(..-6/98)	√	√	√	√	√	√
	02 Transmission Electronicsl	(..-6/98)	√	√	√	√	√	√
	35 Central Locking	(..-6/98)	√	√	√	√	√	√
	08 AC/Heating electronics	(..-6/98)	√	√	√	√	√	√
	38 ROOF ELECTRONICS	(..-6/98)	√	√	√	√	√	√
	17 Instrument Cluster	(..-6/98)	√	√	√	√	√	√
	01 Engine electronics	(..-6/98)	√	√	√	√	√	√
	01 Engine electronics	(..-6/98)	√	√	√	√	√	√
	01 Engine electronics	(..-6/98)	√	√	√	√	√	√
	25 Immobilizer	(..-6/98)	√	√	√	√	√	√
TT	03 Brake Electronics	(..-03)	√	√	√	√	√	√
	15 Airbags	(..-03)	√	√	√	√	√	√
	02 Transmission Electronicsl	(..-03)	√	√	√	√	√	√
	35 Central Locking	(..-03)	√	√	√	√	√	√
	19 Gateway data bus	(..-03)	√	√	√	√	√	√
	08 AC/Heating electronics	(..-03)	√	√	√	√	√	√
	38 ROOF ELECTRONICS	(..-00)	√	√	√	√	√	√
	17 Instrument Cluster	(..-00)	√	√	√	√	√	√
	16 16 Steering Wheel Electronics Electronic	(..-03)	√	√	√	√	√	√
	01 Engine electronics	(..-03)	√	√	√	√	√	√
	01 Engine electronics	(01-..)	√	√	√	√	√	√

## Audi V25.71 Diagnostics List(Note:For reference only)

MODEL	SYSTEM	TYPE	Functions					
			System Info	Read Dtd	Clear Dtd	Data stream	Actuatio	Specail
	25 Immobilizer	(..-00)	√	√	√	√	√	√
V8	22 4WD Electronics	(..-03)	√	√	√	√	√	√
	03 Brake Electronics	(..-6/98)	√	√	√	√	√	√
	03 Brake Electronics	(01-..)	√	√	√	√	√	√
	15 Airbags	(..-6/98)	√	√	√	√	√	√
	49 Auto. Lighting switch	(..-00)	√	√	√	√	√	√
	02 Transmission ElectronicsI	(..-6/98)	√	√	√	√	√	√
	71 Battery charger	(..-00)	√	√	√	√	√	√
	61 Battery control	(..-00)	√	√	√	√	√	√
	43 BRAKER BOOST.ASSI.	(..-00)	√	√	√	√	√	√
	35 Central Locking	(..-6/98)	√	√	√	√	√	√
	08 AC/Heating electronics	(..-6/98)	√	√	√	√	√	√
	38 ROOF ELECTRONICS	(..-6/98)	√	√	√	√	√	√
	17 Instrument Cluster	(..-6/98)	√	√	√	√	√	√
	DRIVER FOOT BOAR	(..-00)	√	√	√	√	√	√
	42 DRIVER-DOOR ELECT.	(..-00)	√	√	√	√	√	√
	09 Electronic Ctrl Electronics	(..-00)	√	√	√	√	√	√
	75 Emergency call module	(..-00)	√	√	√	√	√	√
	01 Engine electronics	(..-6/98)	√	√	√	√	√	√
	01 Engine electronics	(..-00)	√	√	√	√	√	√
	07 DISPLAY-/CNTL UNIT	(..-00)	√	√	√	√	√	√
	25 Immobilizer	(..-6/98)	√	√	√	√	√	√
	62 LR-DOOR ELECTRONI.	(..-00)	√	√	√	√	√	√
	29 Left light control	(..-00)	√	√	√	√	√	√
	53 Parking Brake	(..-00)	√	√	√	√	√	√
	52 PASSE.-DOOR ELECT.	(..-00)	√	√	√	√	√	√
	PASS.FOOT BOARD	(..-00)	√	√	√	√	√	√
	PASSIVE ENTRY	(..-00)	√	√	√	√	√	√

## Audi V25.71 Diagnostics List(Note:For reference only)

MODEL	SYSTEM	TYPE	Functions					
			System Info	Read Dtd	Clear Dtd	Data stream	Actuatio	Specail
	23 BRAKER BOOSTER	(..-00)	√	√	√	√	√	√
	27 DIS./CTL UNIT REAR	(..-00)	√	√	√	√	√	√
	39 Right light control	(..-00)	√	√	√	√	√	√
	72 RR-DOOR ELECTRONI.	(..-00)	√	√	√	√	√	√
	47 Soundsystem	(..-00)	√	√	√	√	√	√
	56 Radio	(..-00)	√	√	√	√	√	√
	65 Tyre pressure monitoring	(..-00)	√	√	√	√	√	√
	57 TV-TUNER	(..-00)	√	√	√	√	√	√
	67 VOICE CONTROL	(..-00)	√	√	√	√	√	√

(\*):Tested;

(?):Manual on website([www.x431.com](http://www.x431.com))

NOTE:The final interpretation of the products belongs to LAUNCH TECH CO.,LTD

<b>CONNECTOR</b>	<b>X431/TOOL</b>	<b>DIAGUN</b>
AUDI-4	Old Audi Model with 4PIN DLC before 1999	N/A
OBD 16C	Audi Model of non-CAN BUS protocol 1999-2005	N/A
CANBUS II	All Audi Models with 16PIN DLC	N/A
SUPER 16	All Audi Models with 16PIN DLC	N/A
diagun connector	N/A	All Audi Models with 16PIN DLC