

Mazda **V35.00** Diagnostics List (Note:For reference only)

Menu		Functions							
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
	MAZDA6(EURO STG3-4 and General)	4x4		√	√				
		ABS/TCS		√	√	√	√	1.Programmable module installation 2.Sensor Initialization	
		FFH		√	√	√			
		GEM		√	√	√			
		ICM		√	√	√		1.Programmable module installation	
		LCM		√	√				
		LHID		√	√	√			
		PCM	√	√	√	√	√	1.Programmable module installation 2.Immo. 3.DPF 4.ETB/EGR Initialization 5.Data Reset 6.Fuel Injector Correction Factors	
		RCM		√	√	√		1.Programmable module installation	
		RHID		√	√	√			
		RKE		√	√	√			
	TCM		√	√	√	√			
	ATENZA(JPN)/MAZDA6(General)	4x4		√	√				
		ABS		√	√	√	√	1.Programmable module installation 2.Sensor Initialization	
		GEM		√	√	√			
		ICM		√	√	√		1.Programmable module installation	
		PCM	√	√	√	√	√	1.Programmable module installation	

Mazda V35.00 Diagnostics List (Note:For reference only)

Menu			Functions						
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
		RCM		√	√	√		1.Programmable module installation	
		TCM		√	√	√	√		
	MPV(JPN/GENERAL)	ABS/TCS		√	√	√	√		
		PCM	√	√	√	√	√		
		TCM		√	√	√	√		
		ABS/TCS		√	√	√	√	√	
	MPV(Europe/General)	FFH		√	√	√			
		PCM	√	√	√	√	√		
		4x4		√	√				
	MAZDA6(North America/General)	ABS		√	√	√	√	1.Programmable module installation	
		GEM		√	√	√			
		ICM		√	√	√		1.Programmable module installation	
		PCM	√	√	√	√	√	1.Programmable module installation 2.EVAP Test	
		RCM		√	√	√		1.Programmable module installation	
		TCM		√	√	√	√		
		ABS/TCS		√	√	√			
	MAZDA2(EURO STG3/4 Specs.)	ICM		√	√	√			
		PCM	√	√	√	√			
		RCM		√	√	√			
		TCM		√	√	√			
		ABS		√	√	√	√	1.Programmable module installation 2.Sensor Initialization	
		EATC		√	√				

Mazda V35.00 Diagnostics List (Note:For reference only)

Menu		Functions							
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
	MAZDA3(EURO STG3/4/5 and General specs.)	EPS		√	√	√		1.Programmable module installation	
		FACM		√	√	√			
		FFH		√	√	√			
		GEM		√	√	√		1.Programmable module installation	
		ICM		√	√	√		1.Programmable module installation	
		PCM	√	√	√	√	√	1.Programmable module installation 2.DPF 3.ETB/EGR Initialization 4.Data Reset 5.Fuel Injector Correction Factors	
		RCM		√	√	√		1.Programmable module installation	
	AXELA-MAZDA3(Japan-General Specs.)	4X4		√	√				
		ABS		√	√	√	√	1.Programmable module installation 2.Sensor Initialization	
		EPS		√	√	√		1.Programmable module installation	
		GEM		√	√	√		1.Programmable module installation	
		ICM		√	√	√		1.Programmable module installation	
		PCM	√	√	√	√	√	1.Programmable module installation	
		RCM		√	√	√		1.Programmable module installation	
	ABS		√	√	√	√	1.Programmable module installation 2.Sensor Initialization		
	EPS		√	√	√		1.Programmable module installation		
	GEM		√	√	√		1.Programmable module installation		

Mazda **V35.00** Diagnostics List (Note: For reference only)

Menu		Functions								
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others	
	MAZDA3(North America/General)	ICM		√	√	√		1.Programmable module installation		
		PCM	√	√	√	√	√	1.Programmable module installation 2.EVAP Test		
		RCM		√	√	√		1.Programmable module installation		
		TCM		√	√	√	√			
	Escape/Tribute(-2006/3)	ABS			√	√	√	√	1.Programmable module installation	
		GEM			√	√	√			
		ICM			√	√	√		1.Programmable module installation	
		PCM	√		√	√	√	√	1.Programmable module installation	
		RCM			√	√	√		1.Programmable module installation	
	BONGO/BONGO BRAWNY/SPECTRON	ABS			√	√	√	√		
		PCM	√		√	√	√	√	1.DPF 2.ETB/EGR Initialization 3.Data Reset 4.Fuel Injector Correction Factors	
		TCM			√	√	√	√		
	MPV(North America/General)	ABS			√	√	√	√	1.Programmable module installation	
		PCM	√		√	√	√	√	1.Programmable module installation 2.EVAP Test	
RCM				√	√	√		1.Programmable module installation		
TCM				√	√	√	√			
TITAN DASH	PCM			√	√	√	√			
	TCM			√	√	√	√			

Mazda **V35.00** Diagnostics List (Note:For reference only)

Menu		Functions							
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
	MAZDA5(EURO STG3/4/5 and General specs.)	ABS		√	√	√	√	1.Programmable module installation 2.Sensor Initialization	
		EPS		√	√	√		1.Programmable module installation	
		FFH		√	√	√			
		GEM		√	√	√		1.Programmable module installation	
		ICM		√	√	√		1.Programmable module installation	
		PCM	√	√	√	√	√	1.Programmable module installation 2.DPF 3.ETB/EGR Initialization 4.Data Reset 5.Fuel Injector Correction Factors	
		RCM		√	√	√		1.Programmable module installation	
	TCM		√	√	√	√			
	PREMACY/MAZDA5(Japan General specs.)	ABS		√	√	√	√	1.Programmable module installation 2.Sensor Initialization	
		EPS		√	√	√		1.Programmable module installation	
		GEM		√	√	√			
		ICM		√	√	√		1.Programmable module installation	
		PCM	√	√	√	√	√	1.Programmable module installation	
RCM			√	√	√		1.Programmable module installation		
	TCM		√	√	√	√			
	ABS		√	√	√	√	1.Programmable module installation		
	EPS		√	√	√		1.Programmable module installation		
	GEM		√	√	√				

Mazda **V35.00** Diagnostics List (Note:For reference only)

Menu		Functions								
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others	
	MAZDA5(North America Specs.)	ICM		√	√	√		1.Programmable module installation		
		PCM	√	√	√	√	√	1.Programmable module installation 2.EVAP Test		
		RCM		√	√	√		1.Programmable module installation		
		TCM		√	√	√	√			
	MX-5(Europe/General Specs.)	ABS		√	√	√	√		1.Programmable module installation 2.Sensor Initialization	
		ICM		√	√	√			1.Programmable module installation	
		PCM	√	√	√	√	√		1.Programmable module installation	
		RCM		√	√	√			1.Programmable module installation	
		RHT		√	√	√				
		RKE		√	√	√				
	ROADSTER/MX-5(Japan/General Specs.)	TCM		√	√	√	√			
		ABS		√	√	√	√		1.Programmable module installation 2.Sensor Initialization	
		ICM		√	√	√			1.Programmable module installation	
		PCM	√	√	√	√	√		1.Programmable module installation	
		RCM		√	√	√			1.Programmable module installation	
		RHT		√	√	√				
		RKE		√	√	√				
		TCM		√	√	√	√			
		ABS		√	√	√	√		1.Programmable module installation 2.Sensor Initialization	
ICM			√	√	√			1.Programmable module installation		

Mazda **V35.00** Diagnostics List (Note:For reference only)

Menu		Functions							
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
	MX-5(North America/General Specs.)	PCM	√	√	√	√	√	1.Programmable module installation 2.EVAP Test	
		RCM		√	√	√		1.Programmable module installation	
		RHT		√	√	√			
		RKE		√	√	√			
		TCM		√	√	√	√		
	RX-8(North America Specs.)	ABS		√	√	√	√	1.Programmable module installation 2.Sensor Initialization	
		EPS		√	√	√			
		ICM		√	√	√		1.Programmable module installation	
		PCM	√	√	√	√	√	1.Programmable module installation 2.EVAP Test	
		RCM		√	√	√		1.Programmable module installation	
		SASM		√	√				
		TCM		√	√	√	√		
	MPV/Mazda8(JPN/General)	4X4		√	√				
		ABS		√	√	√	√		
		GEM		√	√	√			
		ICM		√	√	√		1.Programmable module installation	
		PCM	√	√	√	√	√	1.Programmable module installation	
		RCM		√	√	√		1.Programmable module installation	
		TCM		√	√	√	√		
		ABS		√	√	√	√	1.Programmable module installation 2.Sensor Initialization	

Mazda **V35.00** Diagnostics List (Note:For reference only)

Menu		Functions							
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
RX-8(Europe/General/Japan Specs.)	EPS			√	√	√			
	ICM			√	√	√		1.Programmable module installation	
	LCM			√	√	√			
	PCM	√		√	√	√	√	1.Programmable module installation	
	RCM			√	√	√		1.Programmable module installation	
	RKE			√	√	√			
	SASM			√	√				
	TCM			√	√	√	√		
	TPM			√	√	√			
Escape/Tribute(2006/4-)	ABS			√	√	√	√	1.Programmable module installation	
	GEM			√	√	√		1.Programmable module installation	
	ICM			√	√	√		1.Programmable module installation	
	PCM	√		√	√	√	√	1.Programmable module installation	
	RCM			√	√	√			
CX-7(North America/General Specs.)	4X4			√	√				
	ABS			√	√	√	√		
	GEM			√	√	√			
	ICM			√	√	√		1.Programmable module installation	
	PCM	√		√	√	√	√	1.Programmable module installation 2.EVAP Test	
	RCM			√	√	√		1.Programmable module installation	
	TCM			√	√	√	√		
	4X4			√	√				
	ABS			√	√	√	√		

Mazda V35.00 Diagnostics List (Note:For reference only)

Menu		Functions								
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others	
2001-	CX-7(Japan/General Specs.)	GEM		√	√	√				
		ICM		√	√	√		1.Programmable module installation		
		PCM	√	√	√	√	√	1.Programmable module installation		
		RCM		√	√	√		1.Programmable module installation		
		TCM		√	√	√	√			
	CX-9(North America/General Specs.)	4X4			√	√				
		ABS			√	√	√	√		
		AM			√	√				
		BSML			√	√				
		BSMR			√	√				
		GEM			√	√	√			
		ICM			√	√	√		1.Programmable module installation	
		LCM			√	√	√			
		LTM			√	√				
		PCM	√		√	√	√	√	1.Programmable module installation	
		RCM			√	√	√		1.Programmable module installation	
	TCM			√	√	√	√			
	CX-7(Europe/General Specs.)	4X4			√	√				
		ABS/TCS			√	√	√	√		
		GEM			√	√	√		1.Programmable module installation	
		ICM			√	√	√		1.Programmable module installation	
		PCM	√		√	√	√	√	1.Programmable module installation	
		RCM			√	√	√		1.Programmable module installation	
			4X4		√	√				

Mazda **V35.00** Diagnostics List (Note:For reference only)

Menu		Functions								
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others	
	DEMIO(JPN)-VERISA(JPN)-MAZDA2(General)	ABS/TCS		√	√	√	√	1.Sensor Initialization		
		EPS		√	√	√		1.Programmable module installation		
		ICM		√	√	√		1.Programmable module installation		
		PCM	√	√	√	√	√	1.Programmable module installation		
		RCM		√	√	√		1.Programmable module installation		
	BT-50/Ranger	ABS/TCS		√	√	√	√			
		PCM	√	√	√	√	√	1.Programmable module installation 2.Data Reset 3.Fuel Injector Correction Factors		
		RCM		√	√	√				
		TCM		√	√	√	√			
	PROTEGE	ABS		√	√	√				
		PCM		√	√	√				
	DEMIO(JPN)/MAZDA2(General)	ABS/TCS		√	√	√				
		EPS		√	√	√		1.Programmable module installation 2.Streering Angle Calibration		
		GEM		√	√	√				
		ICM		√	√	√				
		PCM	√	√	√	√				
		RCM		√	√	√		1.Programmable module installation		
		RKE		√	√	√				
TCM			√	√	√					
	ABS/TCS		√	√	√					

Mazda V35.00 Diagnostics List (Note:For reference only)

Menu		Functions							
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
	MAZDA2(Europe)	EPS		√	√	√		1.Programmable module installation 2.Streering Angle Calibration	
		GEM		√	√	√			
		ICM		√	√	√			
		PCM	√	√	√	√			
		RCM		√	√	√		1.Programmable module installation	
		RKE		√	√	√			
		VSM		√	√	√			
	MAZDA2(China)	ABS/TCS		√	√	√		1.Sensor Initialization	
		EPS		√	√	√		1.Programmable module installation 2.Streering Angle Calibration	
		GEM		√	√	√			
		ICM		√	√	√			
		PCM	√	√	√	√			
		RCM		√	√	√		1.Programmable module installation	
		RKE		√	√	√			
		ABS/TCS		√	√	√		1.Programmable module installation	
		EATC		√	√	√			
		EPS		√	√	√		1.Programmable module installation 2.Neutral Position Setting	
		FFH		√	√	√			
		GEM		√	√	√		1.Programmable module installation	
		ICM		√	√	√		1.Programmable module installation	

Mazda **V35.00** Diagnostics List (Note:For reference only)

Menu		Functions							
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
	MAZDA6(Europe and General)	LCM		√	√				
		PCM	√	√	√	√		1.Programmable module installation 2.DPF 3.ETB/EGR Initialization 4.Data Reset 5.Fuel Injector Correction Factors	
		RCM		√	√	√		1.Programmable module installation	
		RKE		√	√	√		1.Programmable module installation	
		RVM		√	√	√		1.Programmable module installation 2.RVM Aiming	
		TCM		√	√	√			
		626/626 WAGON/TELSTAR	ABS		√	√	√		
		PCM	√	√	√	√			
	LASER/323/TIERRA	ABS		√	√	√			
		PCM	√	√	√	√			
	PREMACY/IXION	ABS		√	√	√			
		PCM	√	√	√	√			
	PREMACY	ABS		√	√	√			
		PCM	√	√	√	√			
	Riante(Ianan)	4X4		√	√				
		ABS/TCS		√	√	√			
		EATC		√	√	√			
		EPS		√	√	√			
		GEM		√	√	√			

Mazda V35.00 Diagnostics List (Note:For reference only)

Menu		Functions							
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
	Diamante(Japan)	ICM		√	√	√			
		PCM	√	√	√	√			
		RCM		√	√	√			
		RKE		√	√	√			
		TCM		√	√	√			
	MAZDA3(China/General)	ABS/TCS		√	√	√			
		EPS		√	√	√			
		GEM		√	√	√			
		ICM		√	√	√			
		PCM	√	√	√	√			
		RCM		√	√	√			
		RKE		√	√	√			
	FAMILIA/LASER	ABS		√	√	√			
		PCM	√	√	√	√			
	MX-5	ABS		√	√	√			
		PCM	√	√	√	√			
	AZ/WAGON(MJ)	ABS		√	√	√			
		PCM	√	√	√	√			
		RCM		√	√	√			
	XEDOS9	ABS		√	√	√			
		PCM	√	√	√	√			
	CAPELLA/CAPELLA W/TELSTAR /TELSTAR W	ABS		√	√	√			
		PCM	√	√	√	√			
		ABS		√	√	√			

Mazda **V35.00** Diagnostics List (Note: For reference only)

Menu		Functions							
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
	DEMIO/121 DEMIO/121	EPS		√	√	√			
		PCM	√	√	√	√			
	DEMIO/FESTIVA MINI WAGON	ABS		√	√	√			
		PCM	√	√	√	√			
	FRIENDEE/FREDA/BONGO FRIENDEE	PCM	√	√	√	√			
		TCM		√	√	√			
	BONGO BRAUNY/ECONOVAN/MAZDA E-SERIES	ABS		√	√	√			
		PCM	√	√	√	√			
		TCM		√	√	√			
	Fiesta/Mazda 121/Bantam	ABS		√	√	√			
		ECS		√	√	√			
		GEM		√	√	√			
		HEC		√	√	√			
		PCM	√	√	√	√			
	MX-5 MIATA	ABS		√	√	√			
		PCM	√	√	√	√			
	ROADSTER/MX-5	ABS		√	√	√			
		PCM	√	√	√	√			
	Escape/Tribute/Maverick	4X4		√	√				
		ABS		√	√	√		1.Programmable module installation 2.Sensor Initialization	
GEM			√	√	√				
ICM			√	√	√		1.Programmable module installation		
PAM			√	√	√				

Mazda V35.00 Diagnostics List (Note:For reference only)

Menu		Functions							
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
		PCM	√	√	√	√	√	1.Programmable module installation 2.Immo.	
		RCM		√	√	√		1.Programmable module installation	
	(All MY05)Escape/Tribute/Maverick/Mariner	4X4		√	√				
		ABS		√	√	√			
		GEM		√	√	√			
		ICM		√	√	√			
		PAM		√	√	√			
		PCM	√	√	√	√			
		RCM		√	√	√			
	MAZDA6(China)	ABS		√	√	√			
		EATC		√	√	√			
		EPS		√	√	√		1.Programmable module installation	
		GEM		√	√	√			
		ICM		√	√	√			
		LCM		√	√				
		PCM	√	√	√	√			
		RCM		√	√	√		1.Programmable module installation	
		RKE		√	√	√			
	Millenia	ABS		√	√	√			
		PCM	√	√	√	√			
		4x4		√	√				
		ABS		√	√	√		1.Programmable module installation 2.Sensor Initialization	

Mazda V35.00 Diagnostics List (Note:For reference only)

Menu		Functions							
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
AXELA/MAZDA3	ACU			√	√	√			
	AFS			√	√	√			
	EATC			√	√	√		1.Opertion check	
	EPS			√	√	√		1.Programmable module installation	
	GEM			√	√	√		1.Programmable module installation	
	ICM			√	√	√		1.Programmable module installation	
	LCM			√	√				
	MID			√	√	√		1.Programmable module installation	
	PCM		√	√	√				
	RCM			√	√	√		1.Programmable module installation	
	RKE			√	√	√		1.Programmable module installation	
	RVM			√	√			1.Programmable module installation 2.RVM Aiming	
	TCM			√	√	√			
B-Series/Bravo/Fighter/Courier/Ranger/E	ABS			√	√	√			
	PCM		√	√	√	√			
MARVIE	PCM		√	√	√	√			
MAZDA 929	PCM		√	√	√	√			
MILLENIA/EUNOS 800	ABS			√	√	√			
	PCM		√	√	√	√			
Ranger/Mazda B-Series/Courier	4X4			√	√	√			
	ABS			√	√	√			
	GEM			√	√	√			
	PCM		√	√	√	√			

Mazda **V35.00** Diagnostics List (Note:For reference only)

Menu			Functions							
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others	
	MAZDA6(Middle East/General)	RAM		√	√	√				
		RCM		√	√	√				
		ABS		√	√	√				
		GEM		√	√	√				
		ICM		√	√	√				
		PCM	√	√	√	√				
		RCM		√	√	√				
	TCM		√	√	√					
	Ranger/Courier/Mazda B-Series/Bravo	ABS			√	√	√			
		ESOF			√	√	√			
PCM		√		√	√	√				
01. 01 GY AT MPV(CALIF.)	01. 01 GY AT MPV(CALIF.)	PCM		√	√	√	√			
		ABS		√	√	√	√			
		CCM		√	√					
	02.01 GY A T MPV(FED,CAN BUSADA)	02.01 GY A T MPV(FED,CAN BUSADA)	PCM		√	√	√			
			ABS		√	√	√			
			CCM		√	√				
	03.01 ZM MT PROTEG	03.01 ZM MT PROTEG	PCM		√	√	√	√		
			ABS		√	√	√	√		
			CCM		√	√				
	04.01 ZM AT PROTEGE	04.01 ZM AT PROTEGE	PCM		√	√	√	√		
			ABS		√	√	√	0		
			CCM		√	√				
PCM				√	√	√	√			

Mazda **V35.00** Diagnostics List (Note:For reference only)

Menu			Functions						
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
05.01	FP MT PROTEGE	ABS		√	√	√	√		
		CCM		√	√				
06.01	FP AT PROTEGE	PCM		√	√	√	√		
		ABS		√	√	√	√		
		CCM		√	√				
07.01	FS MT 626	PCM		√	√	√			
		ABS		√	√	√	√		
08.01	FS AT 626	PCM		√	√	√			
		ABS		√	√	√	√		
09.01	KL MT 626	PCM		√	√	√			
		ABS		√	√	√	√		
10.01	KL AT 626	PCM		√	√	√			
		ABS		√	√	√	√		
11.01	BP MT MIATA	PCM		√	√	√	√		
		ABS		√	√	√	√		
		CCM		√	√				
12.01	BP AT MIATA	PCM		√	√	√	√		
		ABS		√	√	√	√		
		CCM		√	√				
13.01	KL AT MILLENIA	PCM		√	√	√	√		
		ABS		√	√	√	√		
		CCM		√	√				
		A/C		√	√				
		PCM		√	√	√	√		

Mazda **V35.00** Diagnostics List (Note: For reference only)

Menu			Functions						
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
19.	01 2.3L MT B2300	PCM		√	√	√			
		ABS		√	√	√	√		
		GEM	√	√	√	√	√		
		IABM	√	√	√	√	√		
		RAP	√	√	√	√	√		
		-4X4	√	√	√	√	√		
20.	01 2.5L AT B2500	PCM		√	√	√			
		ABS		√	√	√	√		
		GEM	√	√	√	√	√		
		IABM	√	√	√	√	√		
		RAP	√	√	√	√	√		
		-4X4	√	√	√	√	√		
21.	01 2.5L MT B2500	PCM		√	√	√			
		ABS		√	√	√	√		
		GEM	√	√	√	√	√		
		IABM	√	√	√	√	√		
		RAP	√	√	√	√	√		
		-4X4	√	√	√	√	√		
22.	01 3.0L AT B3000	PCM		√	√	√			
		ABS		√	√	√	√		
		GEM	√	√	√	√	√		
		IABM	√	√	√	√	√		
		RAP	√	√	√	√	√		
		-4X4	√	√	√	√	√		

Mazda **V35.00** Diagnostics List (Note: For reference only)

Menu			Functions						
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
2001- VIN#1 0:1	23. 01 3.0L MT B3000	PCM		√	√	√			
		ABS		√	√	√	√		
		GEM	√	√	√	√	√		
		IABM	√	√	√	√	√		
		RAP	√	√	√	√	√		
		-4X4	√	√	√	√	√		
	24. 01 4.0L AT B4000	PCM		√	√	√			
		ABS		√	√	√	√		
		GEM	√	√	√	√	√		
		IABM	√	√	√	√	√		
		RAP	√	√	√	√	√		
		-4X4	√	√	√	√	√		
	25. 01 4.0L MT B4000	PCM		√	√	√			
		ABS		√	√	√	√		
		GEM	√	√	√	√	√		
		IABM	√	√	√	√	√		
		RAP	√	√	√	√	√		
		-4X4	√	√	√	√	√		
	121 (DB) B3(MT/AT)	PCM		√	√				
		TCM		√	√				
	121 (DB) B5(MT/AT)	PCM		√	√				
TCM			√	√					
121 (DB) B5(MT/AT) DB1053	PCM		√	√					
121/121 DEMIO(DW) B3(MT)	PCM		√	√	√	√			

Mazda **V35.00** Diagnostics List (Note:For reference only)

Menu			Functions						
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
	121/121 DEMIO(DW) B3(MT)	ABS	√	√	√	√	√		
	121/121 DEMIO(DW) B3(AT)	PCM		√	√	√	√		
		ABS	√	√	√	√	√		
	121/121 DEMIO(DW) B5(MT)	PCM		√	√	√	√		
	121/121 DEMIO(DW) B5(AT)	PCM		√	√	√	√		
		ABS	√	√	√	√	√		
	121/121 DEMIO(DW) B3(MT) DW1052	PCM		√	√	√	√		
		ABS	√	√	√	√	√		
	121/121 DEMIO(DW) B3(AT) DW1052	PCM		√	√	√	√		
		ABS	√	√	√	√	√		
	121/121 DEMIO(DW) B3(MT) DW1032#203028	PCM		√	√	√	√		
		ABS	√	√	√	√	√		
	121/121 DEMIO(DW) B3(AT) DW1032#203028	PCM		√	√	√	√		
		ABS	√	√	√	√	√		
	121/121 DEMIO(DW) B5(MT) DW1052	PCM		√	√	√	√		
		ABS	√	√	√	√	√		
	121/121 DEMIO(DW) B5(AT) DW1052	PCM		√	√	√	√		
		ABS	√	√	√	√	√		
	121/121 DEMIO(DW) B5(MT) DW1032#203028	PCM		√	√	√	√		
		ABS	√	√	√	√	√		
	121/121 DEMIO(DW) B5(AT) DW1032#203028	PCM		√	√	√	√		
		ABS	√	√	√	√	√		
	323 (BG) B3(MT/AT)	PCM		√	√				
		ABS		√	√				

Mazda **V35.00** Diagnostics List (Note: For reference only)

Menu		Functions							
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
		TCM		√	√				
	323 (BG) B6(MT/AT)	PCM		√	√				
		ABS		√	√				
		TCM		√	√				
		PCM		√	√				
	323 (BG) BP(MT/AT)	ABS		√	√				
		TCM		√	√				
		PCM		√	√				
	323 (BG) ADR BP-SOHC(AT) BG10P2	PCM		√	√				
		ABS		√	√				
	323 (BA) B3(MT)	PCM		√	√	√	√		
		ABS		√	√				
	323 (BJ) B3(MT)	PCM		√	√	√	√		
		ABS	√	√	√	√	√		
	323 (BJ) ZL(MT)	PCM		√	√	√	√		
		ABS	√	√	√	√	√		
	323 (BJ) ZL(AT)	PCM		√	√	√	√		
		ABS	√	√	√	√	√		
	323 (BJ) ZM(MT)	PCM		√	√	√	√		
		ABS	√	√	√	√	√		
	323 (BJ) ZM(AT)	PCM		√	√	√	√		
		ABS	√	√	√	√	√		
	323 (BJ) FP(MT)	PCM		√	√	√	√		
		ABS	√	√	√	√	√		
	323 (BI) EP(AT)	PCM		√	√	√	√		

Mazda **V35.00** Diagnostics List (Note:For reference only)

Menu			Functions						
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
	323 (BJ) RF(AT)	ABS	√	√	√	√	√		
	323 (BJ) RF-I(MT)	PCM		√	√	√	√		
	323 (BJ) B3(MT) #200001	PCM		√	√	√	√		
		ABS	√	√	√	√	√		
	323 (BJ) ZL(MT) #200001	PCM		√	√	√	√		
		ABS	√	√	√	√	√		
	323 (BJ) ZL(AT) #200001	PCM		√	√	√	√		
		ABS	√	√	√	√	√		
	323 (BJ) ZM(MT) #200001	PCM		√	√	√	√		
		ABS	√	√	√	√	√		
	323 (BJ) ZM(AT) #200001	PCM		√	√	√	√		
		ABS	√	√	√	√	√		
	323 (BJ) FP(MT) #200001	PCM		√	√	√	√		
		ABS	√	√	√	√	√		
	323 (BJ) FP(AT) #200001	PCM		√	√	√	√		
		ABS	√	√	√	√	√		
	MX-5 (NB) BP(MT)	PCM		√	√	√	√		
	MX-5 (NB) BP(AT)	PCM		√	√	√	√		
	MX-5 (NB) BP(MT) NB30P2	PCM		√	√	√	√		
		ABS	√	√	√	√	√		
	MPV(LW) FS(AT)	PCM		√	√	√	√		
		ABS	√	√	√	√	√		
	MPV(LW) GY(AT)	PCM		√	√	√	√		
	B-SERIES(UF) G6(MT)	PCM		√	√	√	√		

Mazda **V35.00** Diagnostics List (Note:For reference only)

Menu			Functions						
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
	B-SERIES(UF) G6(AT)	PCM		√	√	√	√		
	B-SERIES(UF) F2(MT)	PCM		√	√	√	√		
	B-SERIES(UN) G6(MT)	PCM		√	√	√	√		
	B-SERIES(UN) G6(MT)	PCM		√	√	√	√		
	B-SERIES(UN) F2(MT)	PCM		√	√	√	√		
	E-SERIES (SR) FE-EGI(MT)	PCM		√	√	√	√		
	E-SERIES(SK,SL) F8-EGI(MT)	PCM		√	√	√	√		
	E-SERIES(SK,SL) FE-EGI(MT)	PCM		√	√	√	√		
	BONGO FRIENDEE(SG) J5(AT)	PCM		√	√	√	√		
	BONGO FRIENDEE(SG) J5(AT) SG10J4	PCM		√	√	√	√		
		A/C		√	√				
		ABS		√	√				
		TCM		√	√	√	√		
	PREMACY (CP) FP(AT)	PCM		√	√	√	√		
		ABS		√	√	√	√		
	626 (GF) FS(MT)	PCM		√	√	√			
	626 (GF) FS(AT)	PCM		√	√	√			
	626 (GF) FS(MT) #200001	PCM		√	√	√	√		
		ABS	√	√	√	√	√		
	626 (GF) FS(AT) #200001	PCM		√	√	√	√		
		ABS		√	√	√	√		
	626 WAGON(GW) FS(MT)	PCM		√	√	√			
	626 WAGON(GW) FS(AT)	PCM		√	√	√			
	626 WAGON(GW) FS(MT) #200001	PCM		√	√	√			

Mazda **V35.00** Diagnostics List (Note:For reference only)

Menu			Functions						
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
	626 WAGON(GW) FS(MT) #200001	PCM		√	√	√			
	1. 00 GY AT MPV(CALIF.)	PCM		√	√	√	√		
		ABS		√	√	√	√		
		CCM		√	√				
	2. 00 GY AT MPV (FED,CAN BUSADA)	PCM		√	√	√	√		
		ABS		√	√	√	√		
		CCM		√	√				
	3 00 ZM MT PROTEGE	PCM		√	√	√	√		
		ABS		√	√	√	√		
		CCM		√	√				
	4 00 ZM AT PROTEGE	PCM		√	√	√	√		
		ABS		√	√	√	√		
		CCM		√	√				
	5 00 FP MT PROTEGE	PCM		√	√	√	√		
		ABS		√	√	√	√		
		CCM		√	√				
	6 00 FP AT PROTEGE	PCM		√	√	√	√		
		ABS		√	√	√	√		
		CCM		√	√				
	7 00 FS MT 626	PCM		√	√	√			
		ABS		√	√	√	√		
	8 00 FS AT 626	PCM		√	√	√			
		ABS		√	√	√	√		
	9 00 KI MT 626	PCM		√	√	√			

Mazda **V35.00** Diagnostics List (Note: For reference only)

Menu		Functions							
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
2000- VIN#1 0:Y	9 00 KL MT 626	ABS		√	√	√	√		
		PCM		√	√	√			
	10 00 KL AT 626	ABS		√	√	√	√		
		PCM		√	√	√	√		
	11 00 BP MT MIATA	ABS		√	√				
		CCM		√	√				
	12 00 BP AT MIATA	PCM		√	√	√	√		
		ABS		√	√				
		CCM		√	√				
	13 00 KL AT MILLENIA	PCM		√	√	√	√		
		A/C		√	√				
		ABS		√	√	√	√		
		CCM		√	√				
	14 00 KJ AT MILLENIA	PCM		√	√	√	√		
		A/C		√	√				
		ABS		√	√	√	√		
		CCM		√	√				
	15 00 2.5L AT B2500	PCM		√	√	√			
		ABS		√	√	√	√		
		GEM	√	√	√	√	√		
	IABM	√	√	√	√	√			
	PATS		√	√	√				
	RAP	√	√	√	√	√			
	PCM		√	√	√				

Mazda **V35.00** Diagnostics List (Note: For reference only)

Menu		Functions							
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
	16 00 2.5L MT B2500	ABS		√	√	√	√		
		GEM	√	√	√	√	√		
		IABM	√	√	√	√	√		
		PATS		√	√	√			
		RAP	√	√	√	√	√		
	17 00 3.0L AT B3000	PCM		√	√	√			
		ABS		√	√	√	√		
		GEM	√	√	√	√	√		
		IABM	√	√	√	√	√		
		PATS		√	√	√			
	18 00 3.0L MT B3000	RAP	√	√	√	√	√		
		PCM		√	√	√			
		ABS		√	√	√	√		
		GEM	√	√	√	√	√		
		IABM	√	√	√	√	√		
	20 00 4.0 L AT B4000	PATS		√	√	√			
		RAP	√	√	√	√	√		
		PCM		√	√	√			
		ABS		√	√	√	√		
		GEM	√	√	√	√	√		
		IABM	√	√	√	√			
		PATS		√	√	√			
		RAP	√	√	√	√			
		PCM		√	√	√			

Mazda **V35.00** Diagnostics List (Note: For reference only)

Menu			Functions						
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
	20 00 4.0 L MT B4000	ABS		√	√	√	√		
		GEM	√	√	√	√	√		
		IABM	√	√	√	√	√		
		PATS		√	√	√			
		RAP	√	√	√	√	√		
1 99 ZM MT PROTEGE		PCM		√	√	√	√		
		ABS		√	√				
		CCM		√	√				
2 99 ZM AT PROTEGE		PCM		√	√	√	√		
		ABS		√	√				
		CCM		√	√				
3 99 FP MT PROTEGE		PCM		√	√	√	√		
		ABS		√	√				
		CCM		√	√				
4 99 FP AT PROTEGE		PCM		√	√	√	√		
		ABS		√	√				
		CCM		√	√				
5 99 FS MT 626		PCM		√	√	√			
		ABS		√	√				
6 99 FS AT 626		PCM		√	√	√			
		ABS		√	√	√	√		
7 99 KL MT 626		PCM		√	√	√			
		ABS		√	√	√	√		
8 99 KI AT 626		PCM		√	√	√			

Mazda V35.00 Diagnostics List (Note: For reference only)

Menu			Functions						
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
1999- VIN#1 0:X	8 99 KE AT 020	ABS		√	√	√	√		
		PCM		√	√	√	√		
	9 99 BP MT MIATA	ABS		√	√				
		CCM		√	√				
	10 99 BP AT MIATA	PCM		√	√	√	√		
		ABS		√	√				
		CCM		√	√				
	11 99 JE AT MPV	PCM		√	√	√	√		
		ABS		√	√				
		CCM		√	√				
	12 99 KL AT MILLENIA	PCM		√	√	√	√		
		A/C		√	√				
		ABS		√	√				
		CCM		√	√				
	13 99 KJ AT MILLENIA	PCM		√	√	√	√		
		A/C		√	√				
		ABS		√	√				
		CCM		√	√				
	14 99 KL AT MILLENIA(NEW ABS)	PCM		√	√	√	√		
		A/C		√	√				
	ABS		√	√	√	√			
	CCM		√	√					
15 99 KI AT MILLENIA(NEW ABS)	PCM		√	√	√	√			
	A/C		√	√					

Mazda **V35.00** Diagnostics List (Note: For reference only)

Menu			Functions						
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
	15 99 1.5 AT MILLENNIA (NEW ABS)	ABS		√	√	√	√		
		CCM		√	√				
	16 99 2.5L AT B2500	PCM		√	√	√			
		ABS		√	√	√	√		
		GEM	√	√	√	√	√		
		PATS		√	√	√			
		RAP	√	√	√	√	√		
		RCM	√	√	√	√	√		
		PCM		√	√	√			
	17 99 2.5L MT B2500	ABS		√	√	√	√		
		GEM	√	√	√	√	√		
		PATS		√	√	√			
		RAP	√	√	√	√	√		
		RCM	√	√	√	√	√		
		PCM		√	√	√			
	18 99 3.0L AT B3000	ABS		√	√	√	√		
		GEM	√	√	√	√	√		
		PATS		√	√	√			
		RAP	√	√	√	√	√		
		RCM	√	√	√	√	√		
		PCM		√	√	√			
	19 99 3.0L MT B3000	ABS		√	√	√	√		
		GEM	√	√	√	√	√		
		PATS		√	√	√			
		PCM		√	√	√			

Mazda **V35.00** Diagnostics List (Note: For reference only)

Menu			Functions						
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
	2099 4.0L AT B4000	RAP	√	√	√	√	√		
		RCM	√	√	√	√	√		
		PCM		√	√	√			
		ABS		√	√	√	√		
		GEM	√	√	√	√	√		
		PATS		√	√	√			
		RAP	√	√	√	√	√		
		RCM	√	√	√	√	√		
	21 99 4.0L MT B4000	PCM		√	√	√			
		ABS		√	√	√	√		
		GEM	√	√	√	√	√		
		PATS		√	√	√			
		RAP	√	√	√	√	√		
		RCM	√	√	√	√	√		
1 98 Z5 MT PROTEGE	PCM		√	√	√	√			
	ABS		√	√					
2 98 Z5 ECAT PROTEGE	PCM		√	√	√	√			
	ABS		√	√					
3 98 BP MT PROTEGE	PCM		√	√	√	√			
	ABS		√	√					
	CCM		√	√					
4 98 BP ECAT PROTEGE	PCM		√	√	√	√			
	ABS		√	√					
	CCM		√	√					

Mazda **V35.00** Diagnostics List (Note: For reference only)

Menu			Functions						
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
1998- VIN#1 0:W	5 98 FS MT 626	PCM		√	√	√			
		ABS		√	√	√	√		
	6 98 FS ECAT 626	PCM		√	√	√			
		ABS		√	√	√	√		
	7 98 KL MT 626	PCM		√	√	√			
		ABS		√	√	√	√		
	8 98 KL ECAT 626	PCM		√	√	√			
		ABS		√	√	√	√		
	9 98 JE ECAT MPV	PCM		√	√	√	√		
		ABS		√	√				
		CCM		√	√				
	10 98 KL ECAT MILLENIA	PCM		√	√	√	√		
		A/C		√	√				
		ABS		√	√				
		CCM		√	√				
	11 98 KJ ECAT MILLENIA	PCM		√	√	√	√		
		A/C		√	√				
		ABS		√	√				
		CCM		√	√				
	12 98 2.5L AT B2500	PCM		√	√	√			
ABS			√	√	√	√			
GEM		√	√	√	√	√			
IABM		√	√	√	√	√			
RAP		√	√	√	√	√			

Mazda **V35.00** Diagnostics List (Note: For reference only)

Menu			Functions						
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
		RAP	√	√	√	√	√		
1	97 Z5 MT 323/PROTEGE	PCM		√	√	√	√		
		ABS		√	√				
2	97 Z5 ECAT 323/PROTEGE	PCM		√	√	√	√		
		ABS		√	√				
3	97 BP MT 323/PROTEGE	PCM		√	√	√	√		
		ABS		√	√				
4	97 BP ECAT 323/PROTEGE	PCM		√	√	√	√		
		ABS		√	√				
5	97 FS MT 626/MX-6	PCM		√	√	√	√		
		ABS		√	√				
		CCM		√	√				
6	97 FS ECAT 626/MX-6	PCM		√	√	√			
		ABS		√	√				
		CCM		√	√				
7	97 KL MT 626/MX-6	PCM		√	√	√	√		
		ABS		√	√				
		CCM		√	√				
8	97 KL ECAT 626/MX-6	PCM		√	√	√	√		
		ABS		√	√				
		CCM		√	√				
9	97 BP MT MIATA	PCM		√	√	√	√		
		ABS		√	√				
		CCM		√	√				

Mazda **V35.00** Diagnostics List (Note: For reference only)

Menu			Functions						
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
1997- VIN#1 0:V	10 97 BP ECAT MIATA	PCM		√	√	√	√		
		ABS		√	√				
		CCM		√	√				
	11 97 JE ECAT MPV	PCM		√	√	√	√		
		ABS		√	√				
		CCM		√	√				
	12 97 KL ECAT MILLENIA	PCM		√	√	√	√		
		A/C		√	√				
		ABS		√	√				
	13 97 KJ ECAT MILLENIA	CCM		√	√				
		PCM		√	√	√	√		
		A/C		√	√				
		ABS		√	√				
	14 97 2.3L AT B2300	CCM		√	√				
		PCM		√	√	√			
		ABS		√	√				
		GEM	√	√	√	√	√		
		IABM	√	√	√	√	√		
	RAP	√	√	√	√	√			
	15 97 2.3L MT B2300	PCM		√	√	√			
ABS			√	√	√	√			
GEM		√	√	√	√	√			
IABM		√	√	√	√	√			
RAP		√	√	√	√	√			

Mazda **V35.00** Diagnostics List (Note: For reference only)

Menu		Functions							
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
	16 97 3.0L AT B3000	PCM		√	√	√			
		ABS		√	√	√	√		
		GEM	√	√	√	√	√		
		IABM	√	√	√	√	√		
		RAP	√	√	√	√	√		
	17 97 3.0L MT B3000	PCM		√	√	√			
		ABS		√	√	√	√		
		GEM	√	√	√	√	√		
		IABM	√	√	√	√	√		
		RAP	√	√	√	√	√		
	18 97 4.0L AT B4000	PCM		√	√	√			
		ABS		√	√	√	√		
		GEM	√	√	√	√	√		
		IABM	√	√	√	√	√		
		RAP	√	√	√	√	√		
	19 97 4.0L AT B4000	PCM		√	√	√			
		ABS		√	√	√	√		
		GEM	√	√	√	√	√		
		IABM	√	√	√	√	√		
		RAP	√	√	√	√	√		
1 96 Z5 MT 323/PROTEGE	PCM		√	√	√	√			
	ABS		√	√					
	CCM		√	√					
	PCM		√	√	√	√			

Mazda **V35.00** Diagnostics List (Note: For reference only)

Menu				Functions							
Year	Vehicle			System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
	2	96	Z5 ECAT 323/PROTEGE	ABS		√	√				
				CCM		√	√				
	3	96	BP MT 323/PROTEGE	PCM		√	√	√	√		
				ABS		√	√				
				CCM		√	√				
	4	96	BP ECAT 323/PROTEGE	PCM		√	√	√	√		
				ABS		√	√				
				CCM		√	√				
	5	96	FS MT 626/MX-6	PCM		√	√	√	√		
				ABS		√	√				
				CCM		√	√				
	6	96	FS ECAT 626/MX-6	PCM		√	√	√			
				ABS		√	√				
				CCM		√	√				
	7	96	KL MT 626/MX-6	PCM		√	√	√	√		
				ABS		√	√				
				CCM		√	√				
	8	96	KL ECAT 626/MX-6	PCM		√	√	√	√		
				ABS		√	√				
				CCM		√	√				
	9	96	ECAT 929	PCM		√	√	√	√		
				A/C		√	√				
				ABS		√	√				
				CCM		√	√				

Mazda **V35.00** Diagnostics List (Note: For reference only)

Menu			Functions						
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
1996- VIN#1 0:T	10 96 BP MT MIATA	PCM		√	√	√	√		
		ABS		√	√				
	11 96 BP ECAT MIATA	PCM		√	√	√	√		
		ABS		√	√				
	12 96 B6 MT MX-3	PCM		√	√	√	√		
		ABS		√	√				
	13 96 B6 ECAT MX-3	PCM		√	√	√	√		
		ABS		√	√				
	14 96 K8 MT MX-3	PCM		√	√	√	√		
		ABS		√	√				
	15 96 K8 ECAT MX-3	PCM		√	√	√	√		
		ABS		√	√				
	16 96 JE ECAT MPV	PCM		√	√	√	√		
		ABS		√	√				
		CCM		√	√				
	17 96 KL ECAT MILLENIA	P CM		√	√	√	√		
		A/C		√	√				
		ABS		√	√				
		CCM		√	√				
	18 96 KJ ECAT MILLENIA	PCM		√	√	√	√		
A/C			√	√					
ABS			√	√					
CCM			√	√					
		PCM		√	√	√			

Mazda **V35.00** Diagnostics List (Note: For reference only)

Menu		Functions							
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
	19 96 2.3L AT B2300	ABS		√	√	√	√		
		GEM	√	√	√	√	√		
		IABM	√	√	√	√	√		
		RAP	√	√	√	√	√		
	20 96 2.3L MT B2300	PCM		√	√	√			
		ABS		√	√	√	√		
		GEM	√	√	√	√	√		
		IABM	√	√	√	√	√		
	21 96 3.0L AT B3000	RAP	√	√	√	√	√		
		PCM		√	√	√			
		ABS		√	√	√	√		
		GEM	√	√	√	√	√		
	22 96 3.0L MT B3000	IABM	√	√	√	√	√		
		RAP	√	√	√	√	√		
		PCM		√	√	√			
		ABS		√	√	√	√		
	23 96 4.0L AT B4000	GEM	√	√	√	√	√		
		IABM	√	√	√	√	√		
		RAP	√	√	√	√	√		
		PCM		√	√	√			

Mazda **V35.00** Diagnostics List (Note: For reference only)

Menu			Functions						
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
	24 96 4.0L MT B4000	PCM		√	√	√			
		ABS		√	√	√	√		
		GEM	√	√	√	√	√		
		IABM	√	√	√	√	√		
		RAP	√	√	√	√	√		
1 95 Z5 MT 323/PROTEGE		PCM		√	√				
		ABS		√	√				
		CCM		√	√				
2 95 Z5 ECAT 323/PROTEGE		PCM		√	√				
		ABS		√	√				
		CCM		√	√				
3 95 BP MT 323/PROTEGE		PCM		√	√				
		ABS		√	√				
		CCM		√	√				
4 95 BP ECAT 323/PROTEGE		PCM		√	√				
		ABS		√	√				
		CCM		√	√				
5 95 FS MT 626/MX-6		PCM		√	√				
		ABS		√	√				
		CCM		√	√				
6 95 FS ECAT 626/MX-6		PCM		√	√				
		ABS		√	√				
		CCM		√	√				
		PCM		√	√				

Mazda **V35.00** Diagnostics List (Note: For reference only)

Menu			Functions						
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
1995- VIN#1 0:S	7 95 KL 626/MX-6	ABS		√	√				
		CCM		√	√				
		TCM		√	√				
	8 95 ALL 929	PCM		√	√				
		A/C		√	√				
		ABS		√	√				
		CCM		√	√				
		TCM		√	√				
	9 95 B6 MX-3	PCM		√	√				
		ABS		√	√				
		TCM		√	√				
	10 95 K8 MX-3	PCM		√	√				
		ABS		√	√				
		TCM		√	√				
	11 95 ALL MIATA	PCM		√	√				
		ABS		√	√				
		TCM		√	√				
	12 95 ALL RX-7	PCM		√	√				
		ABS		√	√				
		CCM		√	√				
		TCM		√	√				
13 95 G6 MPV	PCM		√	√					
14 95 JE MPV	PCM		√	√					
	TCM		√	√					

Mazda **V35.00** Diagnostics List (Note: For reference only)

Menu			Functions						
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
	21 95 4.0L AT B4000	PCM		√	√	√			
		ABS	√	√	√	√	√		
		GEM	√	√	√	√	√		
		RAP	√	√	√	√	√		
	22 95 4.0L MT B4000	PCM		√	√	√			
		ABS	√	√	√	√	√		
		GEM	√	√	√	√	√		
		RAP	√	√	√	√	√		
1 94 ALL 323/PROTEGE	PCM		√	√					
	TCM		√	√					
2 94 FS MT 626/MX-6	PCM		√	√					
	ABS		√	√					
	CCM		√	√					
3 94 FS ECAT 626/MX-6	PCM		√	√					
	ABS		√	√					
	CCM		√	√					
4 94 KL 626/MX-6	PCM		√	√					
	ABS		√	√					
	CCM		√	√					
	TCM		√	√					
5 94 ALL 929	PCM		√	√					
	A/C		√	√					
	CCM		√	√					
	TCM		√	√					

Mazda **V35.00** Diagnostics List (Note: For reference only)

Menu			Functions						
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
1994- VIN#1 0:R	6 94 B6 MX-3	PCM		√	√				
		ABS		√	√				
		TCM		√	√				
	7 94 K8 MX-3	PCM		√	√				
		ABS		√	√				
		TCM		√	√				
	8 94 ALL MIATA	PCM		√	√				
		TCM		√	√				
	9 94 ALL RX-7	PCM		√	√				
		CCM		√	√				
		TCM		√	√				
	10 94 G6 MPV	PCM		√	√				
		TCM		√	√				
	11 94 JE MPV	PCM		√	√				
		TCM		√	√				
	12 94 4.0L NAVAJO	PCM		√	√				
		ABS		√	√				
	13 94 2.3L 49S B230C	PCM		√	√				
	14 94 2.3L CAL B2300	PCM		√	√				
	15 94 3.0L B3000	PCM		√	√				
16 94 4.0L 49S B400C	PCM		√	√					
17 94 4.0L CAL B4000	PCM		√	√					
		PC M		√	√				
		A/C		√	√				

Mazda **V35.00** Diagnostics List (Note: For reference only)

Menu			Functions						
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
1993- VIN#1 0:P	93 ALL VEHICLES EXCEPT NAVAJO	ABS		√	√				
		CCM		√	√				
		TCM		√	√				
	93 4.0L 49S NAVAJO	PCM		√	√				
		ABS		√	√				
	93 4.0L CAL NAVAJO	PCM		√	√				
ABS			√	√					
1992- VIN#1 0:N	92 ALL VEHICLES EXCEPT NAVAJO	PCM		√	√				
		A/C		√	√				
		ABS		√	√				
		CCM		√	√				
		TCM		√	√				
1991- VIN#1 0:M	91 ALL VEHICLES EXCEPT NAVAJO	PCM		√	√				
		TCM		√	√				
1990- VIN#1 0:L	90 ALL VEHICLES	PCM		√	√				
		TCM		√	√				
1989- VIN#1 0:K	89 ALL VEHICLES	PCM		√	√				
		TCM		√	√				
1988- VIN#1	88 ALL VEHICLES	PCM		√	√				

Mazda **V35.00** Diagnostics List (Note:For reference only)

Menu			Functions						
Year	Vehicle	System	Sys. Info.	Read code	Clear code	Data stream	Actuation	Special Functions	Others
0:J		TCM		√	√				

(*):Tested;

(?):Manual on website(www.x431.com)

Note:All description rights reserved by LAUNCH TECH.CO.,LTD

CONNECTOR	X431	DIAGUN
SMART OBD	N/A	N/A
MAZDA 17	Use for the cars of 17-PIN Diagnostic socket	N/A
OBD 16C	N/A	N/A
CANBUS II	Use for the cars of 16-PIN Diagnostic socket	N/A
diagun connector	N/A	Use for the cars of 16-PIN Diagnostic socket
SUPER 16	Use for the cars of 16-PIN Diagnostic socket	N/A