

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
350Z	Z33	2006 2005 2004 2003 09/2005 08/2004 07/2003 11/2005	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		01/2006	ASD	√	√	√	√	√		
		10/2005	PRECRASH	√	√	√	√			
		11/2004	AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
		11/2003	4WD	√	√	√	√	√	1.Work Support(*)	
		11/2002	4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
ALMERA	N16	08/2009 *	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
ALMERA	N15	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
ALMERA	L31	2006 2005 2004 2003 2002	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		2001	ASD	√	√	√	√	√		
		*	PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
ALMERA	L30	2000 1999 1998 1997	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)				
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		*	ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
ARMADA	TA60	2007 2006 2005 08/2006 10/2004	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		08/2003	ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
ATLEON	TKO	01/2004 05/2001 10/1999	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
AVENIR	W11	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
BASSARA	JU30	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
BLUEBIRD	U34	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
BLUEBIRD	U13	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
CABSTAR	TL0	12/2003	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note: For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
CABSTAR E	TL0	05/2001 11/1998	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
CARAVAN	E25	08/2007 12/2005 08/2004 05/2003 09/2002	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		11/2001	ASD	√	√	√	√	√		
		04/2001	PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
CEDRIC	Y31	08/2009 07/2007 11/2005 01/2004 08/1999 06/1998	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		09/1996	ASD	√	√	√	√	√		
		08/1995	PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
CEDRIC TAXI	Y31	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
CEDRIC/ LORIA	Y34	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
CEDRIC/ LORIA	Y33	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
CEFIRO	A33	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
CEFIRO	J31	12/2005 09/2003	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	
			Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.DTC&SRT CONFIRMATION	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
CEFIRO	J32	02/2008	AT	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			HVAC	√	√	√	√	√	1.Work Support(*)	
			MULTI AV	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
CEFIRO	A32	*	BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
			I-KEY	√	√	√	√	√	1.Work Support(*)	
			DIU		√	√	√			
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
SMART ENTRANCE		√	√	√	√	1.Work Support(*)				
AIR LEVELIZER		√	√	√	√	1.Work Support(*)				

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	
			Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
C-III Validation	ALL	*	ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
			I-KEY	√	√	√	√	√	1.Work Support(*)	
			DIU		√	√	√			
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
SBLIND CAMERA	√			√		1.Work Support(*)				
ACTIVE ENG MOUNT	√	√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	
			Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
CIMA	F50	01/2008 12/2005 08/2003 12/2001 01/2001 *	BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
			I-KEY	√	√	√	√	√	1.Work Support(*)	
			DIU		√	√	√			
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
ASCD		√	√	√						
CHG COMM		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	
			Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
CIMA	FY33	*	AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
			I-KEY	√	√	√	√	√	1.Work Support(*)	
			DIU		√	√	√			
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
DISTANCE CONTROL		√	√	√						
MOTOR ASSIST		√	√	√		1.Work Support(*)				

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	
			Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
		12/2005	IPDM	√	√	√	√	√		
		09/2004	AIR PRESSURE MONITOR	√	√	√	√			
		10/2002	HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
CIVILIAN	W41	11/1999	E-4WD	√	√	√	√	√	1.Freeze Frame(*)	
		02/1999							2.Can Diag Support Mntr (*)	
		09/2009	I-KEY	√	√	√	√	√	1.Work Support(*)	
		07/2007	DIU		√	√	√			
		08/2004	ASD	√	√	√	√	√		
		11/2002	PRECRASH	√	√	√	√			
		02/2000	AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
		04/1994	4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
	MOTOR ASSIST		√	√	√		1.Work Support(*)			
	IVMS	√	√	√	√	√	1.Work Support(*)			
	TORQ CONT	√	√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			TCS	√	√	√	√	√	1.Work Support(*)	
CREW	K30	07/2007 11/2005 06/2002 08/1999	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		06/1998	DIU		√	√	√			
		09/1996	ASD	√	√	√	√	√		
		01/1996	PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
cube	Z11	12/2006 05/2005 05/2003 10/2002	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		10/2008	ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
cube	Z10	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
cube3	Z11	12/2006 05/2005 09/2003	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
DATSUN TRACK	D22	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
ELGRAND	E51	09/2008 06/2007 12/2006 11/2005 08/2004	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		08/2003	ASD	√	√	√	√	√		
		05/2002	PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
ELGRAND	E50	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
FAIRLADY Z	Z33	09/2005 09/2004 10/2003 07/2002	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		07/2008	ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
FRONTIER	D40	2008 2007 2006 2005	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)				
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
FRONTIER	D22	03/2008 2004 2003 2002 2001 2000	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)				
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		1999	ASD	√	√	√	√	√		
		1998	PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note: For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
FRONTIER /NAVARA	D40	12/2006	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
INFINITI FX35/FX4 5	S50	11/2006 08/2005 02/2006 01/2005 03/2004 06/2003 2008 2007 2006	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		2005	ASD	√	√	√	√	√		
		2004	PRECRASH	√	√	√	√			
		2003	AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
		09/2006	4WD	√	√	√	√	√	1.Work Support(*)	
		03/2005	4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
INFINITI G20	P11	2002 2001 2000 1999	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
INFINITI G35 Coupe	CV35	2007 2006 2005 2004 2003 07/2006 08/2005	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		01/2005	ASD	√	√	√	√	√		
		05/2005	PRECRASH	√	√	√	√			
		04/2005	AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
INFINITI G35 Sedan	V35	2006 08/2005 2005 05/2005 2004 2003 08/2004 05/2004 08/2004	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		10/2003	ASD	√	√	√	√	√		
		01/2003	PRECRASH	√	√	√	√			
		01/2005	AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
INFINITI I30	CA32	2001 2000 1999 1998 1997	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)				
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		1996	ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
INFINITI I35	CA33	2004 2003 2002	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
INFINITI M45	Y34	2005 2004 2003	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
INFINITI Q45	F50	11/2005 08/2004	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			2006 IPDM	√	√	√	√	√		
			2005 AIR PRESSURE MONITOR	√	√	√	√			
			2004 HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			2003 E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
2002 I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		08/2003	ASD	√	√	√	√	√		
		09/2002	PRECRASH	√	√	√	√			
		08/2001	AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
		*	4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
INFINITI Q45	FY33	2001 2000 1999 1998 1997	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		1996	ASD	√	√	√	√	√		
		1995	PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
INFINITI QX4	JR50	2003 2002 2001 2000 1999	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		1998	ASD	√	√	√	√	√		
		1997	PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note: For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
INFINITI QX56	JA60	2007 2006 2005 2004 08/2006	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		10/2004	ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
LAUREL	C35	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
LEOPARD	JY33	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
LIBERTY	M12	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
MARCH	K12	05/2007 08/2005 07/2003 02/2002 05/2008 06/2007 10/2005 04/2004	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		06/2003	ASD	√	√	√	√	√		
		06/2003	PRECRASH	√	√	√	√			
		07/2002	AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
		*	4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
MARCH	K11	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
MARCH/ MICRA	K12	05/2008 06/2007 03/2006 07/2002 10/2005	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		04/2004	ASD	√	√	√	√	√		
		06/2003	PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
MARCH/ MICRA	K11	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
MAXIMA	A34	07/2007 05/2006	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		01/2005	ASD	√	√	√	√	√		
		08/2004	PRECRASH	√	√	√	√			
		01/2003	AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
MAXIMA	A33	2003 2002 2001 2000 1999	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		1998	ASD	√	√	√	√	√		
		*	PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
MAXIMA QX	A33	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
MAXIMA QX	A32	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
MAXIMA/ CEFIRO	A33	01/1999	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
MAXIMA/ CEFIRO	J31	12/2005 09/2003	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	
			Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.DTC&SRT CONFIRMATION	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
MAXIMA/ CEFIRO	J32	01/2009 02/2008	AT	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			HVAC	√	√	√	√	√	1.Work Support(*)	
			MULTI AV	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
MICRA	K12	11/2002 03/2006 04/2004	BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
			I-KEY	√	√	√	√	√	1.Work Support(*)	
			DIU		√	√	√			
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
NATS IMMU	√	√	√							
SMART ENTRANCE		√	√	√	√	1.Work Support(*)				
AIR LEVELIZER		√	√	√	√	1.Work Support(*)				

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	
			Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
MICRA	K11	*	ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
			I-KEY	√	√	√	√	√	1.Work Support(*)	
			DIU		√	√	√			
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
SBLIND CAMERA	√			√		1.Work Support(*)				
ACTIVE ENG MOUNT	√	√	√	√						

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	
			Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note: For reference only)

Vehicle	Type	Date	System	Functions							
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others	
MISTRAL	R20	*	BAT CONT	√	√	√	√				
			EPS	√	√	√	√		1.Work Support(*)		
			IPDM	√	√	√	√	√			
			AIR PRESSURE MONITOR	√	√	√	√				
			HEAD LAMP LEVELIZER	√	√	√	√	√		1.Work Support(*)	
			E-4WD	√	√	√	√	√		1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
			I-KEY	√	√	√	√	√		1.Work Support(*)	
			DIU		√	√	√				
			ASD	√	√	√	√	√			
			PRECRASH	√	√	√	√				
			AUTO DRIVER POS	√	√	√	√	√		1.Work Support(*)	
			4WD	√	√	√	√	√		1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√			
			SONAR		√	√	√				
			LDW	√	√	√	√	√		1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√			1.Work Support(*)	
			NATS IMMU	√	√	√					
			SMART ENTRANCE		√	√	√	√		1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√		1.Work Support(*)	
			REARVIEW CAMERA	√			√			1.Work Support(*)	
			SBLIND CAMERA	√			√			1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√				
			ACTIVE SUS	√	√	√	√	√		1.Work Support(*)	
ASCD		√	√	√							
CHG COMM		√	√	√							

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	
			Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
		2007	BAT CONT	√	√	√	√			
		2006	EPS	√	√	√	√		1.Work Support(*)	
		2005	IPDM	√	√	√	√	√		

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
MURANO	Z50	2004	AIR PRESSURE MONITOR	√	√	√	√			
		2003	HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
		05/2007	E-4WD	√	√	√	√	√	1.Freeze Frame(*)	
		09/2004							2.Can Diag Support Mntr (*)	
		03/2007	I-KEY	√	√	√	√	√	1.Work Support(*)	
		11/2004	DIU		√	√	√			
		04/2003	ASD	√	√	√	√	√		
		12/2006	PRECRASH	√	√	√	√			
		11/2005	AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
		05/2005	4WD	√	√	√	√	√	1.Work Support(*)	
		03/2003	4WAS/RAS/HICAS	√	√	√	√	√		
		*	SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	
			Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
NAVARA	D40	05/2007 07/2006	E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
		01/2005	I-KEY	√	√	√	√	√	1.Work Support(*)	
		09/2006	DIU		√	√	√			
		06/2005	ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
	IVMS	√	√	√	√	√	1.Work Support(*)			
	TORQ CONT	√	√	√	√					

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			TCS	√	√	√	√	√	1.Work Support(*)	
			Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
PALADIN	D22W	03/2003	I-KEY	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			DIU		√	√	√			
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
PARAMED IC	E50	06/2008 09/2007 01/2006 04/2005 09/2003	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		08/2001	ASD	√	√	√	√	√		
		05/1998	PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
PATHFINDER	R51	05/2007	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			2008 IPDM	√	√	√	√	√		
			2007 AIR PRESSURE MONITOR	√	√	√	√			
			2006 HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			2005 E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
07/2006 I-KEY	√	√	√	√	√	1.Work Support(*)				
01/2005 DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		07/2007	ASD	√	√	√	√	√		
		09/2006	PRECRASH	√	√	√	√			
		12/2005	AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
		03/2005	4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
PATHFINDER	R50	2004 2003 2002 2001 2000 1999 1998 1997	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
			I-KEY	√	√	√	√	√	1.Work Support(*)	
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		1996	ASD	√	√	√	√	√		
		1995	PRECRASH	√	√	√	√			
		* 01/1995	AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
PATHFINDER	WD21	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
PATHFINDER ER ALMADA	TA60	2004	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
PATROL	Y61	12/2006 07/2004 10/2002 06/2001 02/2000 12/1997 07/2007 07/2006 10/2005 04/2004	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		08/2003	ASD	√	√	√	√	√		
		12/2002	PRECRASH	√	√	√	√			
		09/2001	AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
		03/2000	4WD	√	√	√	√	√	1.Work Support(*)	
		08/1998	4WAS/RAS/HICAS	√	√	√	√	√		
		10/1997	SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
PATROL Pickup	UY61	08/2007 12/2006	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
PICKUP	D21	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
PICKUP	D22	09/2004 10/2003 03/2003 11/2001 05/1999	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		02/1998	ASD	√	√	√	√	√		
		*	PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
PICKUP/N AVARA	D22	01/2008 01/1997	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
PRAIRIE	M12	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
PRESAGE	U31	05/2007 05/2006 10/2004 06/2003 01/2005	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		02/2005	ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
PRESAGE	U30	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
PRESEA	R11	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
PRESIDENT T	PF50	12/2005 10/2003	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
PRIMERA	P12	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
PRIMERA	P11	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
PULSAR	N16	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
PULSAR	N15	* 01/1995	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
PULSAR WAGON	Y11	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
QUEST	V42	2009 2008 2007 2006 2005 2004 06/2006 08/2005 05/2005	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
			I-KEY	√	√	√	√	√	1.Work Support(*)	
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		08/2007	ASD	√	√	√	√	√		
		05/2006	PRECRASH	√	√	√	√			
		07/2005	AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
		09/2004	4WD	√	√	√	√	√	1.Work Support(*)	
		05/2003	4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
QUEST	V41	2002 2001 2000 1999	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		*	ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
RASHEEN	RB14	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
RNESSA	N30	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)				
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
SAFARI	Y61	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
SENTRA	B15	2006 2005 2004 2003 2002 2001	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		2001	ASD	√	√	√	√	√		
		2000	PRECRASH	√	√	√	√			
		*	AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
SENTRA	B14	1999 1998 1997 1996 1995	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		1999 *	ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
SERENA	C24	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
SILVIA	S15	* 01/2000	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
SKYLINE	V35	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
SKYLINE	R34	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
SKYLINE Coupe	CV35	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
SKYLINE GT-R	R34	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
STAGEA	M35	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
STAGEA	WC34	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
SUNNY	B15	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
SUNNY	B14	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
SUNNY	Y10	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
SUNNY	N16	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
SUNNY	N15	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
SUNNY/ALMERA	N16	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
SUNNY/ LMERA	N15	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
SUNNY/ALMERA	N16	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
TEANA	J31	12/2005 06/2004 02/2003 04/2006 09/2004	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		09/2003	ASD	√	√	√	√	√		
		07/2004	PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	
			Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.DTC&SRT CONFIRMATION	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
TEANA	J32	08/2009 04/2008	AT	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			HVAC	√	√	√	√	√	1.Work Support(*)	
			MULTI AV	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
		ADAPTIVE LIGHT	√	√	√	√	√	1.Work Support(*)		
		01/2009 09/2009 06/2008 02/2008	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.DTC&SRT CONFIRMATION	
			AT	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
		HVAC	√	√	√	√	√	1.Work Support(*)		

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			MULTI AV	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
TERRANO	WD21	*	AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
			I-KEY	√	√	√	√	√	1.Work Support(*)	
			DIU		√	√	√			
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
DISTANCE CONTROL		√	√	√						
MOTOR ASSIST		√	√	√		1.Work Support(*)				

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	
			Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
TERRANO	R50	*	E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
			I-KEY	√	√	√	√	√	1.Work Support(*)	
			DIU		√	√	√			
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
MOTOR ASSIST		√	√	√		1.Work Support(*)				
IVMS	√	√	√	√	√	1.Work Support(*)				
TORQ CONT	√	√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			TCS	√	√	√	√	√	1.Work Support(*)	
TERRANO	R20	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			DIU		√	√	√			
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
TERRANO /REGULUS	JR50	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
TINO	V10	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
TITAN	A60	08/2006 08/2005	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		10/2004	ASD	√	√	√	√	√		
		10/2003	PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
TSURU/SE NTRA	B13	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
URVAN	E25	08/2007 01/2006 05/2003 07/2001	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		01/2006	ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
WINGROAD	Y11	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
WINGROAD	Y10	*	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU			√	√	√					

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
XTERRA	N50	07/2007 09/2005	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		01/2005	ASD	√	√	√	√	√		
		08/2007	PRECRASH	√	√	√	√			
		09/2006	AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
XTERRA	WD22	2004 2003 2002 2001 2000	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		1999	ASD	√	√	√	√	√		
		*	PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
X-TRAIL	T30	* 11/2007 10/2005 2006 2005	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Freeze Frame(*) 4.IDLE AIR VOL LEARN(*)	
			AT	√	√	√	√	√	1.Calib Data (*) 2.Fuction test(*) 3.Work Support(*) 4.Freeze Frame(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.Can Diag(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			Airbag	√	√	√			1.Fuction test(*)	
			ICC	√	√	√	√			
			HVAC	√	√	√	√			
			MULTI AV	√	√	√	√	√	1.Work Support(*)	
			BAT CONT	√	√	√	√			
			EPS	√	√	√	√		1.Work Support(*)	
			IPDM	√	√	√	√	√		
			AIR PRESSURE MONITOR	√	√	√	√			
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
			E-4WD	√	√	√	√	√	1.Freeze Frame(*) 2.Can Diag Support Mntr (*)	
I-KEY	√	√	√	√	√	1.Work Support(*)				
DIU		√	√	√						

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		2009 06/2001	ASD	√	√	√	√	√		
			PRECRASH	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√	1.Work Support(*)	
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			SONAR		√	√	√			
			LDW	√	√	√	√	√	1.Work Support(*)	
			ADAPTIVE LIGHT	√	√	√	√		1.Work Support(*)	
			NATS IMMU	√	√	√				
			SMART ENTRANCE		√	√	√	√	1.Work Support(*)	
			AIR LEVELIZER		√	√	√	√	1.Work Support(*)	
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			SBLIND CAMERA	√			√		1.Work Support(*)	
			ACTIVE ENG MOUNT	√	√	√	√			
			ACTIVE SUS	√	√	√	√	√	1.Work Support(*)	
			ASCD		√	√	√			
			CHG COMM		√	√	√			
			TK_ECU_TYPE_CLUCH	√	√	√	√			
			DISTANCE CONTROL		√	√	√			
			MOTOR ASSIST		√	√	√		1.Work Support(*)	
			IVMS	√	√	√	√	√	1.Work Support(*)	
			TORQ CONT	√	√	√	√			
			TCS	√	√	√	√	√	1.Work Support(*)	
			Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*) 3.DTC&SRT CONFIRMATION	

Nissan V39.00 Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
NOTE	E11	08/2009 12/2007	AT	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*)	
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			E-4WD	√	√	√	√	√		
			EPS	√	√	√	√			
			I-KEY	√	√	√	√	√	1.Work Support(*)	
			IPDM	√	√	√	√	√		
			Airbag	√	√	√			1.Fuction test(*)	
			HEAD LAMP LEVELIZER	√	√	√	√	√	1.Work Support(*)	
FUGA	Y50	08/2009 11/2007	Engine	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*)	
			AT	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*)	
			BCM	√	√	√	√	√	1.Work Support(*)	
			METER		√	√	√			
			AIR PRESSURE MONITOR	√	√	√	√			
			AUTO DRIVER POS	√	√	√	√	√		
			I-KEY	√	√	√	√	√	1.Work Support(*)	
			IPDM	√	√	√	√	√		
			4WD	√	√	√	√	√	1.Work Support(*)	
			4WAS/RAS/HICAS	√	√	√	√	√		
			ACCELE PEDAL	√	√	√	√	√		
			ADAPTIVE LIGHT	√	√	√	√	√	1.Work Support(*)	

Nissan **V39.00** Diagnostics List (Note:For reference only)

Vehicle	Type	Date	System	Functions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
			ICC	√	√	√	√	√		
			MULTI AV	√	√	√	√		1.Work Support(*)	
			PRECRASH-SEATBELT	√	√	√	√			
			ABS System	√	√	√	√	√	1.Fuction test(*) 2.Work Support(*)	
			Airbag	√	√	√			1.Fuction test(*)	
			SONAR	√	√	√				
			REARVIEW CAMERA	√			√		1.Work Support(*)	
			S/BLIND CAMERA	√			√		1.Work Support(*)	

(*):Tested;

(?):Manual on website(www.x431.com)

Note:The final interpretation of the products belongs to LAUNCH TECH CO.,LTD.

CONNECTOR	X431	DIAGUN
SMART OBD	N/A	N/A
OBD 16C	The vehicle with 16PIN and without CAN-BUS.	N/A
CANBUS II	The vehicle with 16PIN and with CAN-BUS.	N/A
diagun connector	N/A	The vehicle with 16PIN diagnostic socket.
SUPER 16	The vehicle with 16PIN diagnostic socket.	N/A
NISSAN-14+16	The vehicle with 14PIN diagnostic socket.	The vehicle with 14PIN diagnostic socket.